

TDC Smart Compact Temperature difference controller



Installation and operating instructions



Read carefully before installation, commissioning and operation

CONTENT

Safety Instructions	4
EU-Conformity	4
General Instructions	4
Explanation of Symbols	4
Changes to the Unit	5
Warranty and Liability	5
Disposal and Pollutants	5
Description TDC Smart Compact	6
About the Controller	6
Technical Data	6
Scope of Supply	7
Hydraulic Variants	7
Installation	9
Wall Installation	9
Electrical Connection	9
Installing the Temperature Sensors	10
Temperature Resistance Table for Pt1000 Sensors	10
Electrical Terminals	11
Operation	21
Display and Input	21
Commissioning help	22
System Status	22
System overview	22
Message Log	22
WiFi-Status	22
MQTT status	22
Support authorization	22
Statistic	23
Operating hours	23
Heat quantity	23
Message Log	23
Reset / Delete	23
Settings	23
Menu visibility	24
Network	25
WiFi	25
Activate WiFi	25
WiFi-Status	25
Select Network	25
Manage Access	25
SSID	25
WiFi password	25
Activate DHCP	25
MQTT	25
Activate MQTT	25
Activate TLS	25
Broker address	25
Port	25
MQTT user name	25
MQTT password	25
Devices	25
Program selection	25
Functions	26
Solar thermal	26
Collector	26
Signal Settings	26
Signal type	26
Signal profile	26
Output Signal	26
Off Signal	26
On Signal	26
Max Signal	26
Purging time	26
Flow rate regulation	26
ΔT Flow rate regulation	26
Switchover	26
Tmin Collector	26
ΔT Solar	26

ΔT Solar off	26
Pool ΔT on	26
Pool ΔT off	26
Starting aid	26
Purging time	27
Increase	27
Protective Functions	27
Recooling	27
System protection	27
System protection Ton	27
System protection Toff	27
Collector protection	27
Collector alarm	27
Frost Protection	27
Seizing Protection	28
Heat quantity	28
Heat metering	28
Flow rate Min.	28
Flow rate Max.	28
Glycol type	28
Glycol percentage	28
ΔT offset	28
Storage	28
Tmax	28
Priority	28
Tpriority	28
Loading time	28
Increase	28
Tmax pool	28
Recooling	28
Recooling Tset	28
Heat exchanger	29
Tmax heat exchanger	29
Solid fuel boiler	29
Signal Settings	29
Signal type	29
Signal profile	29
Output Signal	29
Off Signal	29
On Signal	29
Max Signal	29
Flow rate regulation	29
ΔT Flow rate regulation	29
ΔT boiler off	29
ΔT boiler off	29
Tmin Boiler	29
Tmax	29
Seizing Protection	29
Heat quantity	29
Heat metering	29
Flow rate Min.	30
Flow rate Max.	30
Glycol type	30
Glycol percentage	30
ΔT offset	30
Heat transfer	30
Signal Settings	30
Signal type	30
Signal profile	30
Output Signal	30
Off Signal	30
On Signal	30
Max Signal	30
Purging time	30
Flow rate regulation	30
ΔT Flow rate regulation	30
Tmin source	30
ΔT transfer on	30
ΔT transfer off	30
Tmax target	30
Protective Functions	30
Recooling	30
Recooling Tset	31
Seizing Protection	31
Heat quantity	31
Heat metering	31
Flow rate Min.	31
Flow rate Max.	31
Glycol type	31

Glycol percentage	31	Display indication	36
ΔT offset	31	Eco Display Mode	36
Return increase	31	Display Brightness	36
ΔT HC return On	31	Automatic menu lock	36
ΔT HC return Off	31	Logbook	36
Tmax	31	Factory settings	36
Seizing Protection	31	Manual operation	37
Heat quantity	31	Language	37
Heat metering	31	Support	38
Flow rate Min.	31	WLAN and Internet	38
Flow rate Max.	31	Replacing the Fuse	39
Glycol type	31	Maintenance	39
Glycol percentage	31	Message Log	40
ΔT offset	31	SOREL Connect App	41
Thermostat	32	Final Declaration	42
Signal Settings	32		
Relay Modus	32		
Thermostat Tset	32		
Hysteresis	32		
Dehumidifier times	32		
Seizing Protection	32		
Difference	32		
Signal Settings	32		
Signal type	32		
Signal profile	32		
Output Signal	32		
Off Signal	32		
On Signal	32		
Max Signal	32		
Purging time	32		
Flow rate regulation	33		
ΔT Flow rate regulation	33		
ΔT Difference On	33		
ΔT Difference Off	33		
Tmin Source	33		
Tmax Target	33		
Seizing Protection	33		
Heat quantity	33		
Heat metering	33		
Flow rate Min.	33		
Flow rate Max.	33		
Glycol type	33		
Glycol percentage	33		
ΔT offset	33		
ΔT valve	33		
ΔT valve on	33		
ΔT valve off	33		
Tmax	33		
Seizing Protection	34		
Heat quantity	34		
Heat metering	34		
Flow rate Min.	34		
Flow rate Max.	34		
Glycol type	34		
Glycol percentage	34		
ΔT offset	34		
Cooling	34		
Signal Settings	34		
Relay Modus	34		
Cooling Tset	34		
Cooling hysteresis	34		
Dehumidifier times	34		
Seizing Protection	34		
Field cooling	34		
Signal Settings	34		
Relay Modus	34		
Tmax field cooling	34		
Hysteresis min	34		
Hysteresis max	34		
Seizing Protection	35		
Solar bypass	35		
Signal Settings	35		
Relay Modus	35		
Seizing Protection	35		
Date & Time	36		
Date	36		
Time	36		
Daylight saving time	36		
Time zone	36		
Time synchronization	36		

Safety Instructions

EU-Conformity

By affixing the CE mark to the unit the manufacturer declares that the TDC Smart Compact conforms to the following relevant safety regulations:

- EU low voltage directive 2014/35/EU
- EU electromagnetic compatibility directive 2014/30/EU
- Radio Equipment Directive (2014/53/EU)

. Conformity has been verified and the corresponding documentation and the EU declaration of conformity are kept on file by the manufacturer.

General Instructions

Please read carefully!

These installation and operating instructions contain basic instructions and important information regarding safety, installation, commissioning, maintenance and the optimal use of the unit. Therefore these instructions must be read and understood completely by the installation technician/specialist and by the system user before installation, commissioning and operation of the unit.

This unit is an automatic, electrical Temperature difference controller. Install the unit only in dry areas and under the ambient conditions described in "Specifications".

The valid accident prevention regulations, VDE regulations, the regulations of the local power utility, the applicable DIN-EN standards and the installation and operating instruction of the additional system components must also be observed.

Under no circumstances does the unit replace any safety devices to be provided by the customer!

Before commissioning, read the data protection information § 11 at sorel.de/en/terms-and-conditions/.

Installation, electrical connection, commissioning and maintenance of the device may only be carried out by an appropriately trained specialist. Users: Make sure that the specialist gives you detailed information on the function and operation of the unit. Always keep these instructions in the vicinity of the unit.

The manufacturer does not take over any liability for damage caused through improper usage or non-compliance of this manual!

The safety of our products and the protection of our customers are our top priorities. If you discover a potential security vulnerability in one of our products, please inform us immediately. Please send your report to cybersecurity@sorel.de. Please describe the security vulnerability you have discovered in as much detail as possible and, if available, include steps to reproduce it. We will review your report immediately and contact you for further information if necessary. We will review your report immediately and contact you for further information if necessary.

Explanation of Symbols



Danger

Failure to observe these instructions may result in life-threatening effects due to electrical voltage.



Danger

Failure to observe these instructions can result in serious damage to health such as scalding or life-threatening injuries.



Caution

Failure to observe these instructions can result in destruction of the unit or the system, or environmental damage.



Caution

Information which is especially important for the function and optimal use of the unit and the system.

Changes to the Unit

- Changes, additions to or conversion of the unit are not permitted without written permission from the manufacturer.
- It is likewise forbidden to install additional components that have not been tested together with the unit.
- If it becomes apparent that safe operation of the unit is no longer possible, for example due to damage to the housing, the unit must be taken out of operation immediately.
- Any parts of the unit or accessories that are not in perfect condition must be exchanged immediately.
- Use only original spare parts and accessories from the manufacturer.
- Markings made on the unit at the factory must not be altered, removed or made illegible.
- Only the settings described in these instructions may be set using the Unit.



Changes to the unit can compromise the safety and function of the unit or the entire system.

Warranty and Liability

The Unit has been manufactured and tested with regard to high quality and safety requirements. The warranty and liability shall not include, however, any injury to persons or material damage that is attributable to one or more of the following causes:

- Failure to observe these installation and operating instructions.
- Improper installation, commissioning, maintenance and operation.
- Improperly executed repairs.
- Unauthorised structural changes to the unit.
- Use of the device for other than its intended purpose.
- Operation above or below the limit values listed in the 'Specifications' section.
- Force majeure.

Disposal and Pollutants

The unit conforms to the European RoHS 2011/65/EU for the restriction of the use of certain hazardous substances in electrical and electronic equipment.



Under no circumstances may the device be disposed of with the normal household waste. Dispose of the unit only at appropriate collection points or ship it back to the seller or manufacturer.

Description TDC Smart Compact

About the Controller

The Temperature difference controller TDC Smart Compact facilitates efficient use and function control of your solar or heating system possible while its handling is intuitive. After every input step the suitable functions are matched to the keys and explained in a text above. The "System status and settings" menu contains keywords as well as help texts and graphics.

The TDC Smart Compact can be used for various system variants,(see 'Hydraulic Variants' on page 7)

Important characteristics of the TDC Smart Compact are:

- Depiction of graphics and texts using a lit display.
- Simple viewing of the current measurement values.
- Statistics and system monitoring by means of statistical graphics
- Extensive setting menus with explanations.
- Menu block can be activated to prevent unintentional setting changes.
- Resetting to previously selected values or factory settings.

Technical Data

Electrical specifications		
Power Supply		100 - 240VAC
Power consumption / standby		0,5 - 3W/ 0,5 W
Internal fuse	1	2AT 250V
Protection Class		IP40
Protection class / overvoltage category		II / II
Inputs		
Sensor inputs	4 PT1000	Measuring range (-50°C....300°C)
Outputs		
Mechanical relay (changeover contact)	1	460VA for AC1 / 460W for AC3
Mechanical relay (normally open contact)	1	460VA for AC1 / 460W for AC3
0-10V/PWM	1	designed for 10kΩ load / frequency 1kHz, level 10V
Connectivity		
WiFi		IEEE 802.11 b/g/n (2.4 GHz), up to 150 Mbps, WPA2/WPA3
App support		SOREL Connect App
Max. Cable Length		
Collector sensor		< 30 m
Other Pt1000 sensors		< 10 m
0-10V/PWM		< 3 m
Switching outputs mains voltage		< 3 m
Permissible Ambient Conditions		
Controller operation		0 °C - 40 °C, max. 85 % rel. humidity at 25 °C
Transport / Storage		0 °C - 60 °C, no moisture condensation permitted
Other Specifications and Dimensions		
Housing Design		3-part, ABS plastic
Installation Methods		Wall installation, optionally panel installation
Dimensions		116 mm x 86 mm x 37 mm
Display		TFT colour display, 2.4", 240 x 320 dots
Operation		Touch input (capacitive)


Scope of Supply
















- Temperature difference controller
- 3 screws 3.5x35mm and 3 wall plugs S6 for wall mounting
- 4 strain relief clips with 8 screws
- Spare fuse 2A 250V (in the housing cover)
- TDC Smart Compact installation and operating instructions




Hydraulic Variants

⚠ The following illustrations should be regarded only as schematic representations of the respective hydraulic systems and do not claim to be complete. Under no circumstances should the controller replace any safety devices. Depending on the specific application, additional system and safety components such as check valves, non-return valves, safety temperature limiters, scalding protectors, etc., may be required.

! For 3-way valves, the flow direction in energized state (relay active) is shown in the used hydraulic version.

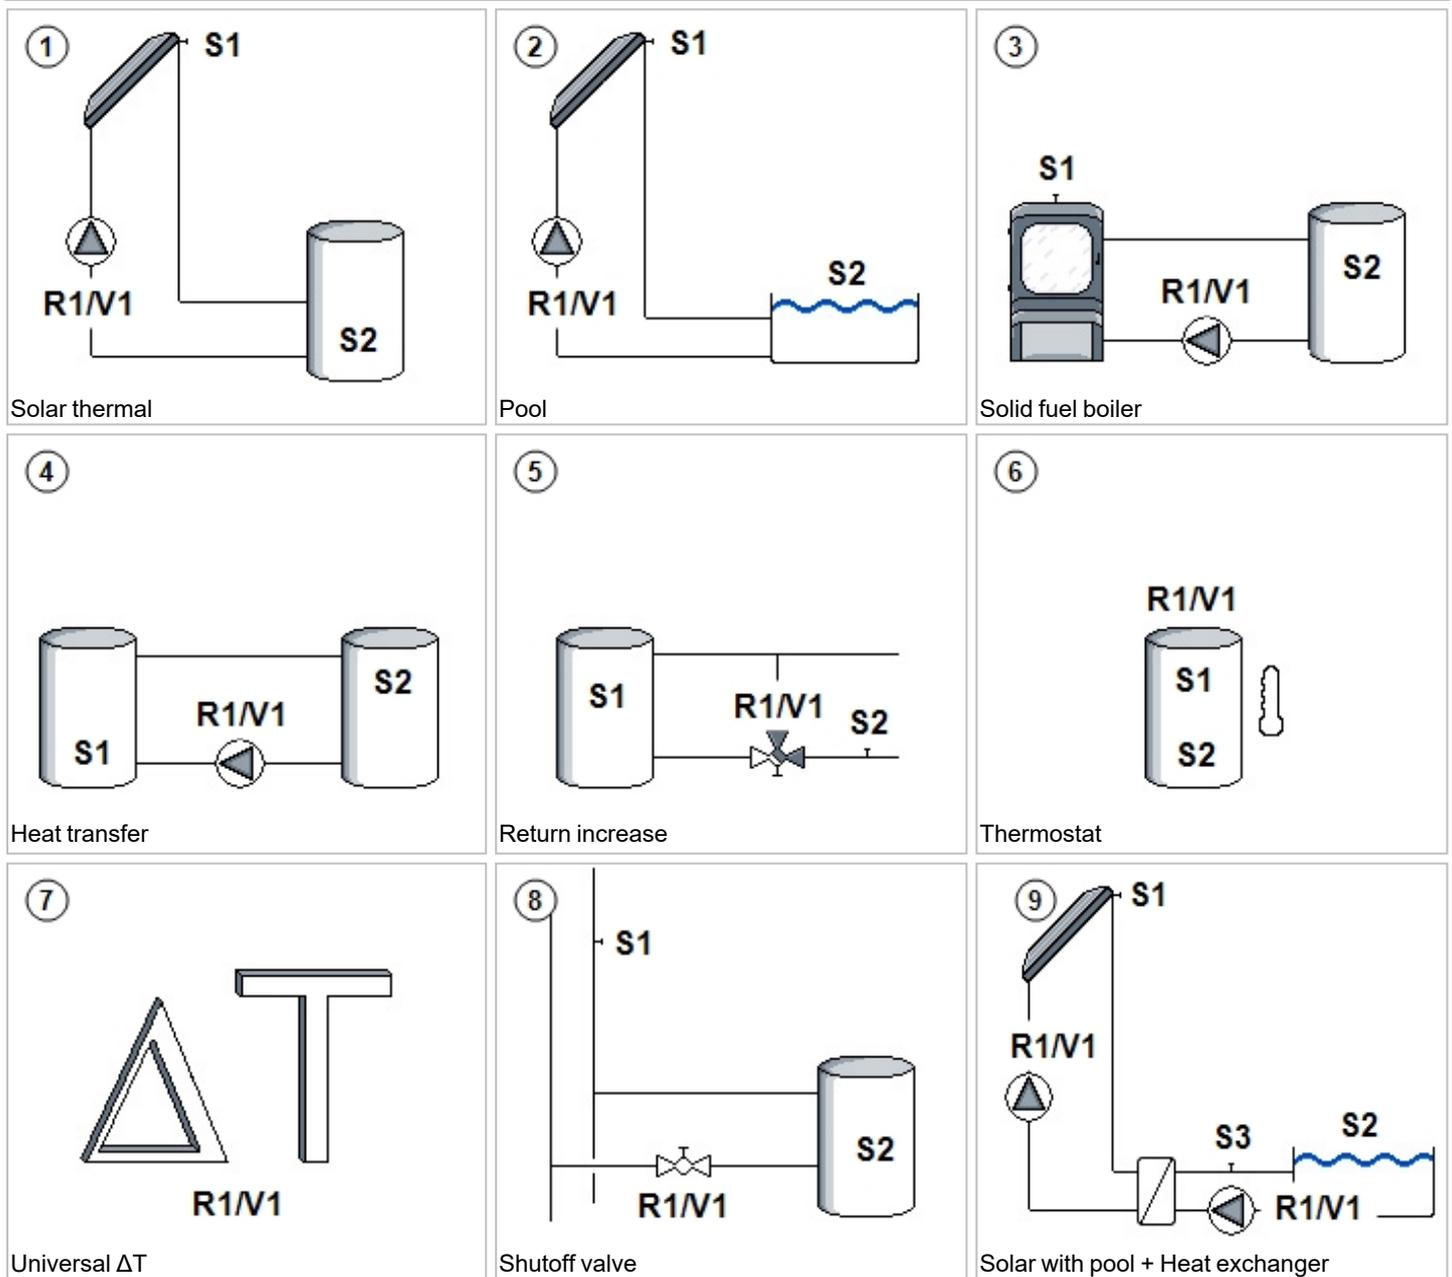


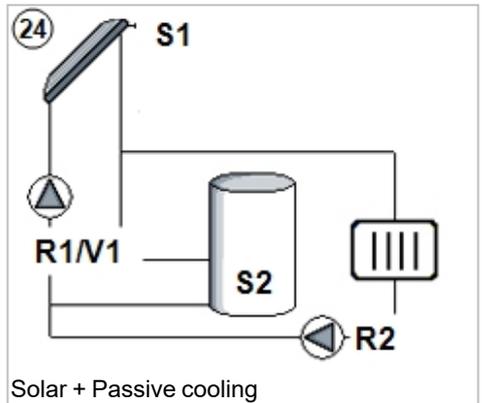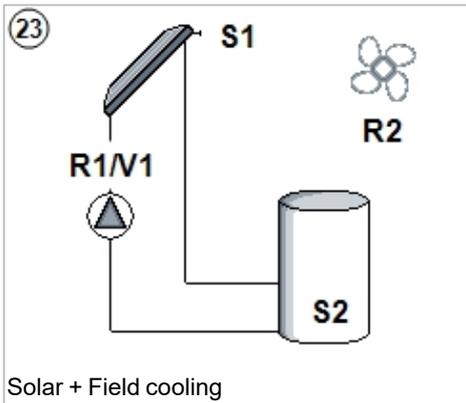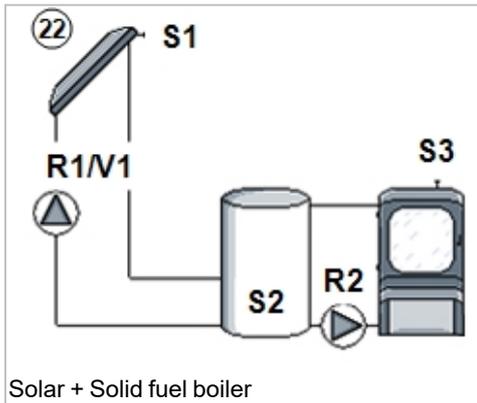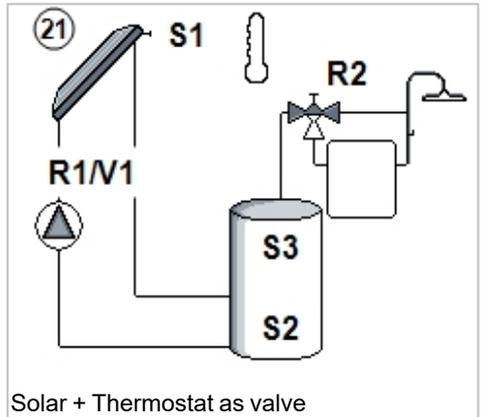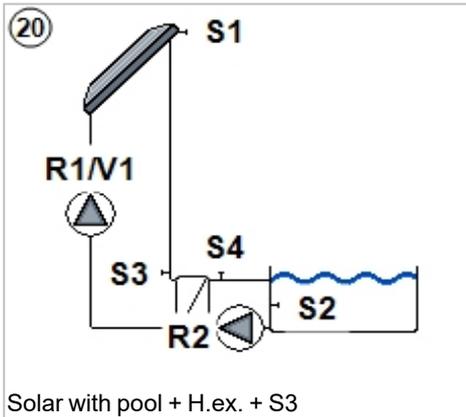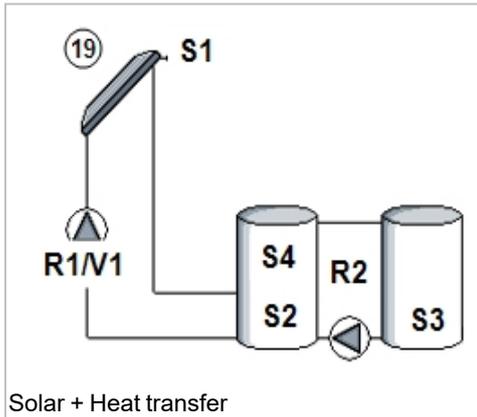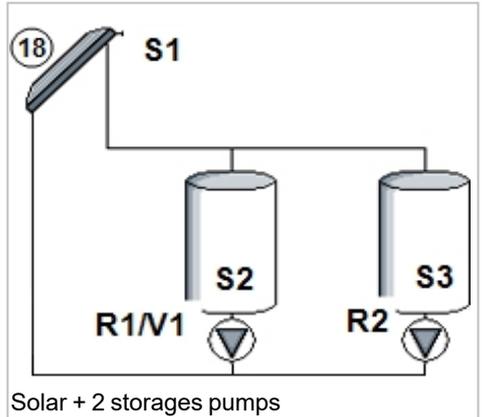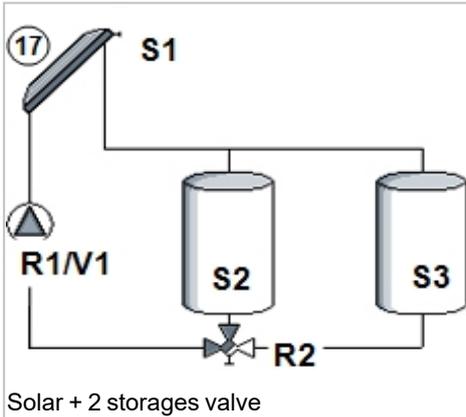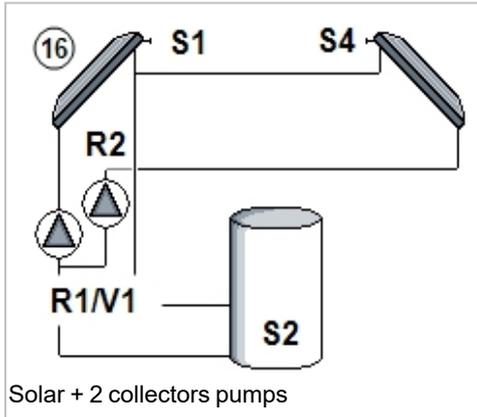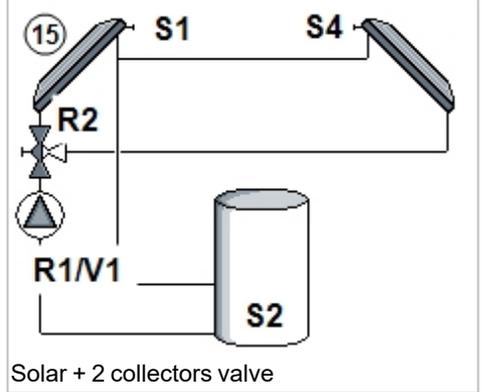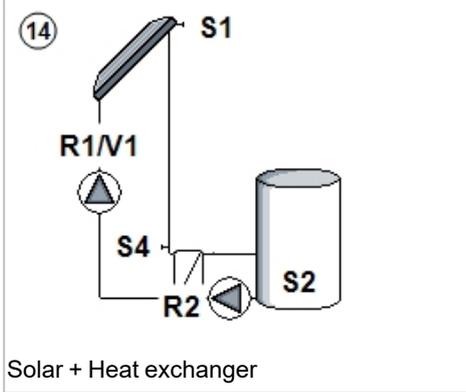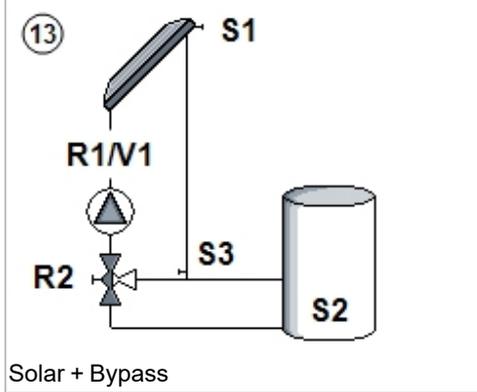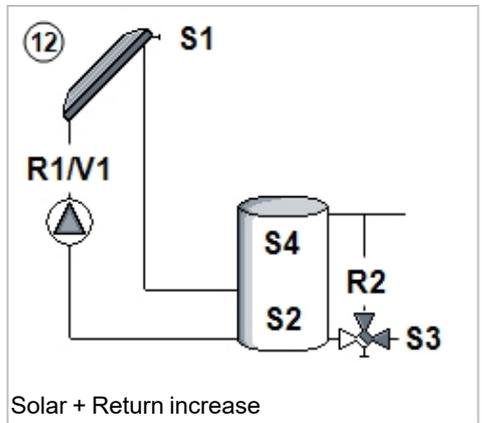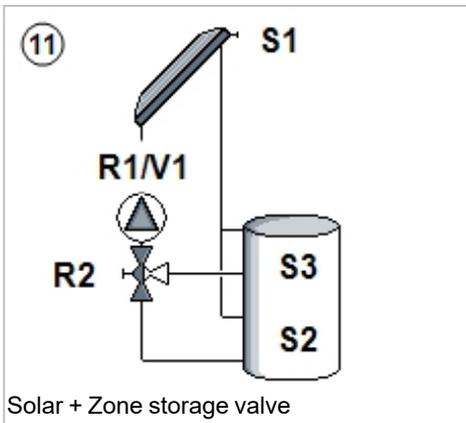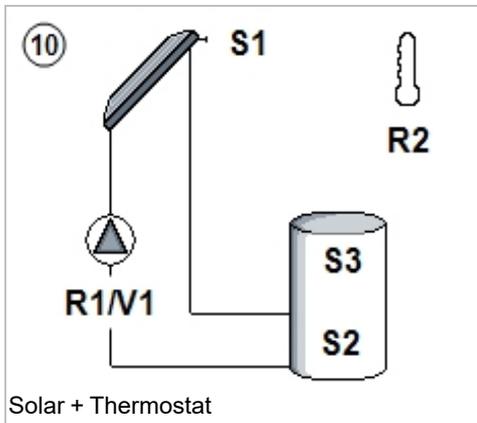

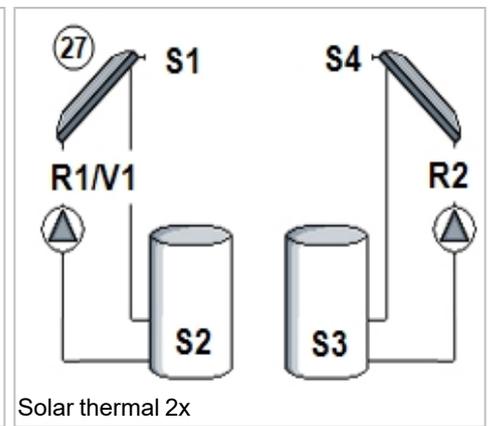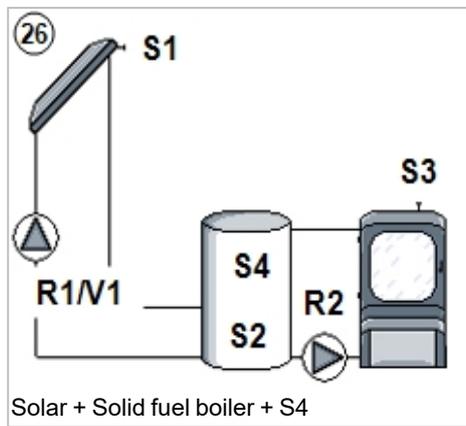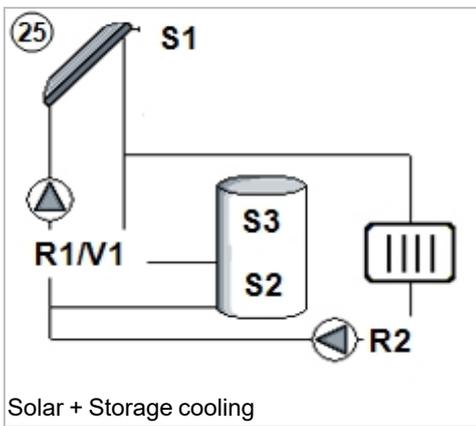

Installation

Wall Installation

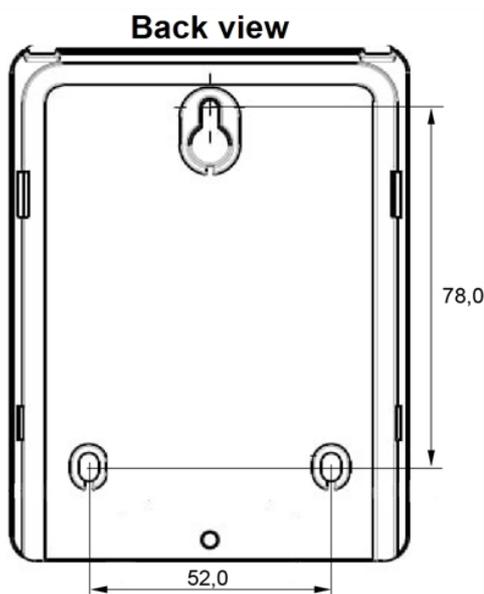

1. Unscrew cover screw completely. Carefully remove the terminal compartment cover from the device
2. Mark a hole at the desired position for the upper suspension of the device. When positioning, ensure that the wall surface is as flat as possible so that the housing does not warp when screwed on.
3. Drill the hole for the suspension using a drill and a 6 mm drill bit. Push in the dowel and screw in the screw until the device can be suspended.
4. Attach and align the device. Then mark the two lower fixing holes.
5. Unhook the device again and drill the marked holes using a 6 mm drill bit and press in the dowels.
6. Reattach the device and insert the two screws (6 mm) into the lower mounting holes and tighten them.
7. After installation, replace the terminal compartment cover and tighten it hand-tight using the screw.

Electrical Connection

 Before working on the unit, switch off the power supply and secure it against being switched on again! Check that there is no power flowing! Electrical connections may only be made by a specialist and in compliance with the applicable regulations. The unit may not be put into operation if there is visible damage to the housing, e.g. cracks.

 The unit may not be accessible from behind.

 Low-voltage cables, such as temperature sensor cables, must be laid separately from mains voltage-carrying cables. Feed temperature sensor cables only into the left-hand side of the unit, and mains voltage cables only into the right-hand side.

 The customer must provide an all-pole disconnecting device, e.g. an emergency heating switch.

 The cables being connected to the unit must not be stripped by more than 55 mm, and the cable jacket must reach into the housing just to the other side of the strain relief.

Installing the Temperature Sensors

The controller operates with Pt1000 temperature sensors which are accurate to 1 °C, ensuring optimal control of system functions.

 If desired, the sensor cables can be extended to a maximum of 30 m using a cable with a cross-section of at least 0.75 mm². Ensure there is no contact resistance! Position the sensor precisely in the area to be measured! Only use immersion, pipe-mounted or flat-mounted sensors suitable for the specific area of application with the appropriate permissible temperature range.

 Low-voltage cables, such as temperature sensor cables, must be laid separately from mains voltage-carrying cables. Feed temperature sensor cables only into the left-hand side of the unit, and mains voltage cables only into the right-hand side.


Temperature Resistance Table for Pt1000 Sensors

°C	-20	-10	0	10	20	30	40	50	60	70	80	90	100
Ω	922	961	1000	1039	1077	1116	1155	1194	1232	1270	1308	1347	1385

Electrical Terminals

 Low voltages max. 12VDC

 Mains voltages 230 VAC 50 - 60 Hz

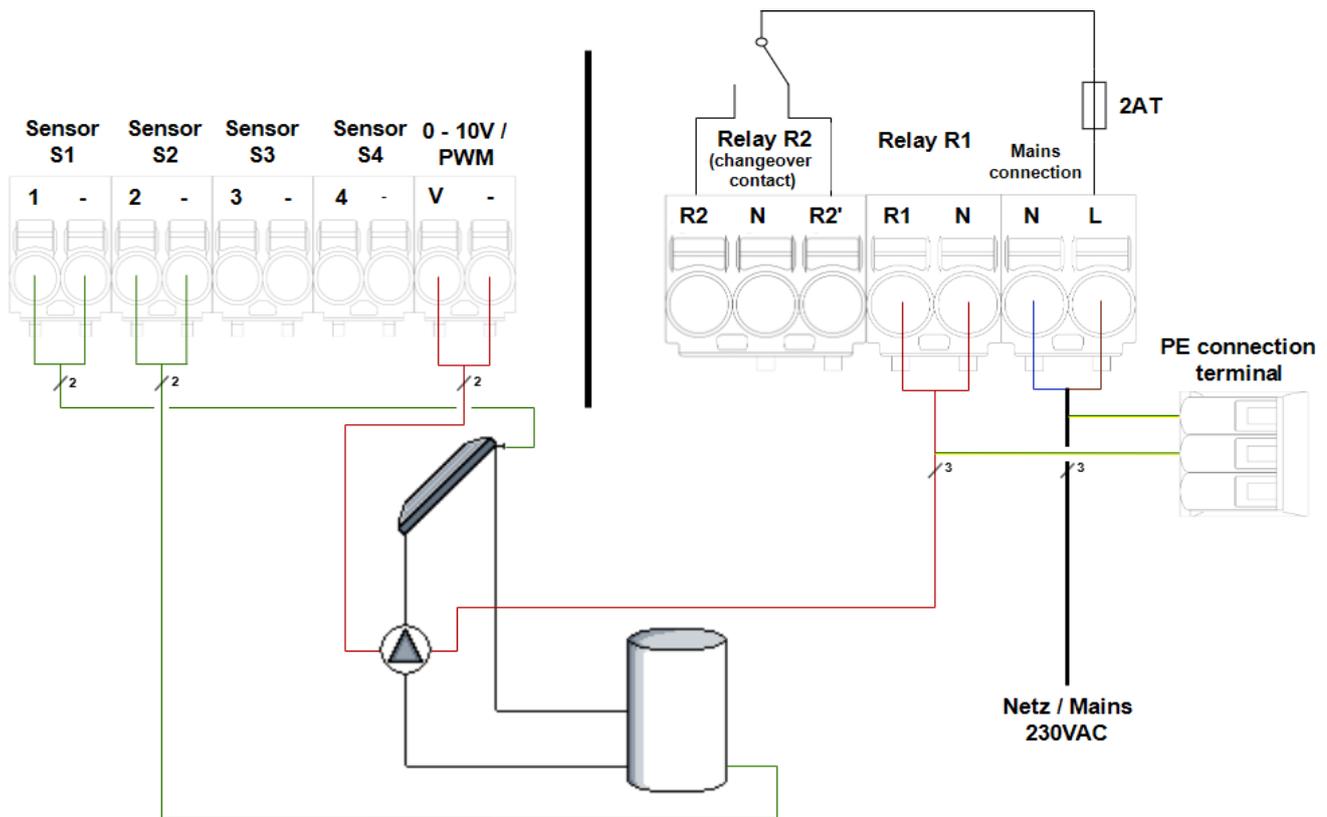


Clamp	Connection	Clamp	Connection
S1	Collector sensor	R2 (NO)	Unused
-	GND S1	N	Unused
S2	Storage sensor bottom	R2' (NC)	Unused
-	GND S2	R1	Solar pump
S3	Storage sensor top (optional)	N	Solar pump neutral conductor N
-	GND S3	N	Neutral conductor N
S4	Optionally	L	Outer conductor L
-	GND S4		
V	Signal solar pump	The PE protective conductor must be connected to the PE metal terminal block!	
-	GND Solar pump		

 **"Connection of PWM pumps"**
 PWM pumps are connected to the controller with 2 wires **1**) PWM Input (default: brown) **2**) GND (default: blue). Some PWM connection cables have 3rd wires (PWM output signal (standard: black)). This is not used for the connection!

 The correct terminal assignment for your system or hydraulic diagram can be found in the descriptions in the respective hydraulic diagram, see 'Hydraulic Variants' on page 7.



For high-efficiency pumps with 0-10V / PWM signal input, the power can be provided (V1 parallel operation) over a free relay.

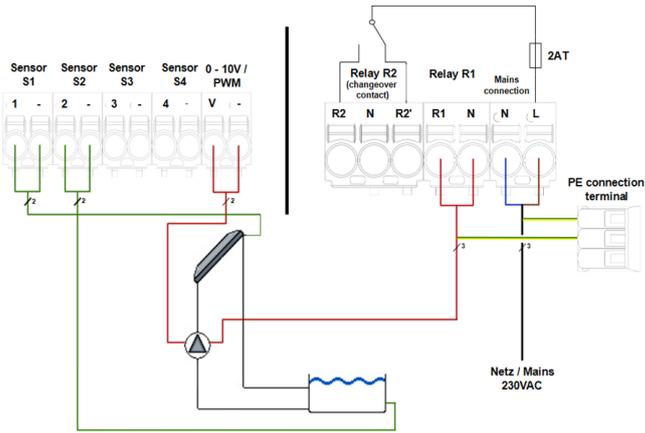

Program 2 Solar with pool




Low Voltage
max. 12VDC



Mains voltages
230VAC 50-60Hz

Terminal:	Connection:	Terminal:	Connection:
S1	Sensor 1 collector	R2 (NO)	Unused
-	GND S1	N	Unused
S2	Sensor 2 Pool	R2' (NC)	Unused
-	GND S2	R1	Solar pump
S3	Sensor 3 (optional)	N	Solar pump neutral conductor N
-	GND S3	N	Neutral conductor N
S4	Sensor 4 (optional)	L	Outer conductor L
-	GND S4		
V1	0-10V/ PWM		
-	GND V1		

The polarity of sensors S1-S4 is arbitrary.

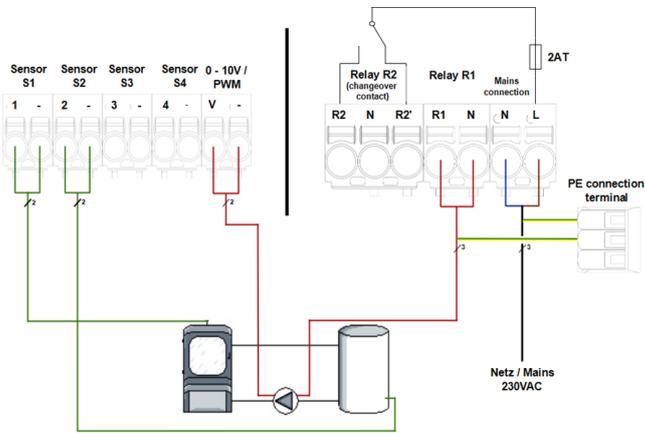

Program 3 Solid fuel with storage tank




Low Voltage
max. 12VDC



Mains voltages
230VAC 50-60Hz

Terminal:	Connection:	Terminal:	Connection:
S1	Sensor 1 solid fuel boiler	R2 (NO)	Unused
-	GND S1	N	Unused
S2	Sensor 2 storage	R2' (NC)	Unused
-	GND S2	R1	Pump
S3	Sensor 3 (optional)	N	Pump neutral conductor N
-	GND S3	N	Neutral conductor N
S4	Sensor 4 (optional)	L	Outer conductor L
-	GND S4		
V1	0-10V/ PWM		
-	GND V1		

The polarity of sensors S1-S4 is arbitrary.

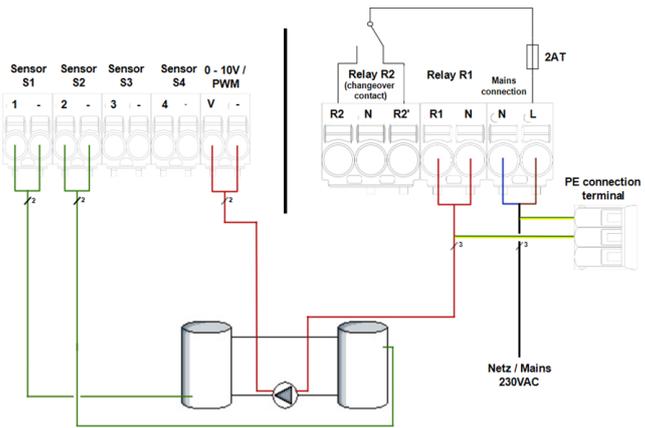

Program 4 Storage transfer



Low Voltage
max. 12VDC




Mains voltages
230VAC 50-60Hz



Terminal:	Connection:	Terminal:	Connection:
S1	Sensor 1 storage 1	R2 (NO)	Unused
-	GND S1	N	Unused
S2	Senaor 2 storage 2	R2' (NC)	Unused
-	GND S2	R1	Pump
S3	Sensor 3 (optional)	N	Pump neutral conductor N
-	GND S3	N	Neutral conductor N
S4	Sensor 4 (optional)	L	Outer conductor L
-	GND S4		
V1	0-10V/ PWM		
-	GND V1		

The polarity of sensors S1-S4 is arbitrary.

Loading direction: Transfer from storage with sensor 1 to storage with sensor 2.

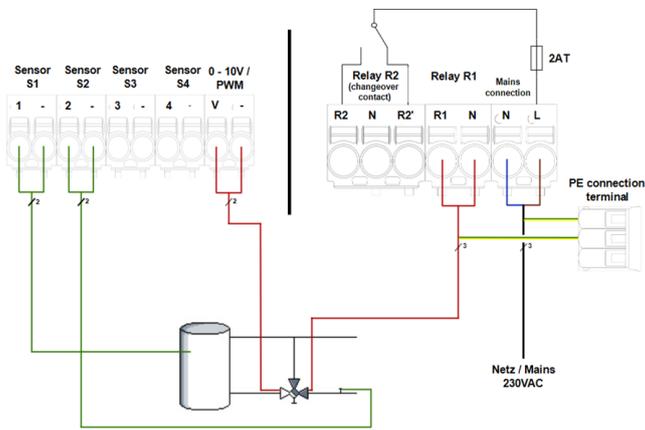

Valve switching direction: R1 on / valve on = path through Storage

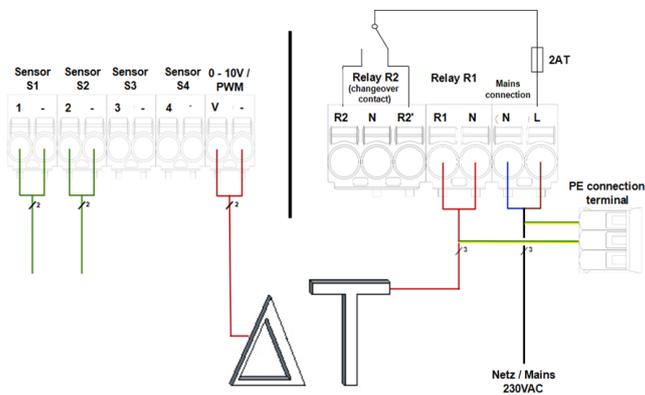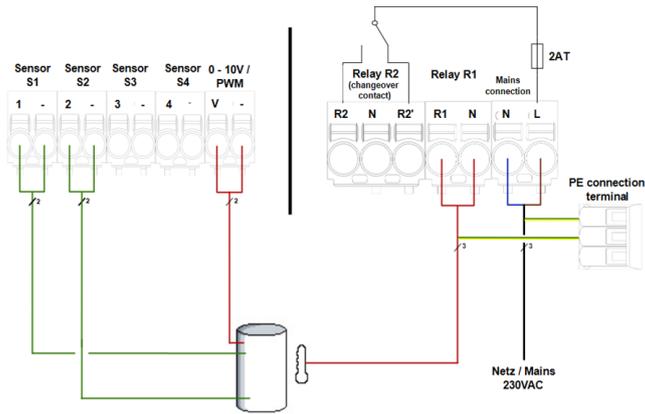

Temperature difference S1 > S2

Program 5 Raising of heat circuit



Low Voltage
max. 12VDC



Mains voltages
230VAC 50-60Hz

Terminal:	Connection:	Terminal:	Connection:
S1	Sensor 1 storage	R2 (NO)	Unused
-	GND S1	N	Unused
S2	Sensor 2 Return flow	R2' (NC)	Unused
-	GND S2	R1	valve
S3	Sensor 3 (optional)	N	Valve neutral conductor N
-	GND S3	N	Neutral conductor N
S4	Sensor 4 (optional)	L	Outer conductor L
-	GND S4		
<i>The polarity of sensors S1-S4 is arbitrary.</i>			
V1	0-10V/ PWM		
-	GND V1		

Program 6 thermostat



Low Voltage
max. 12VDC



Mains voltages
230VAC 50-60Hz

Terminal:	Connection:	Terminal:	Connection:
S1	Sensor 1 storage top	R2 (NO)	Unused
-	GND S1	N	Unused
S2	Sensor 2 (optional)	R2' (NC)	Unused
-	GND S2	R1	Thermostat
S3	Sensor 3 (optional)	N	Thermostat neutral conductor N
-	GND S3	N	Neutral conductor N
S4	Sensor 4 (optional)	L	Outer conductor L
-	GND S4		
<i>The polarity of sensors S1-S4 is arbitrary.</i>			
V1	0-10V/ PWM		
-	GND V1		

Programme 7 Universal ΔT




Low Voltage
max. 12VDC



Mains voltages
230VAC 50-60Hz

Terminal:	Connection:	Terminal:	Connection:
S1	Sensor 1 Source	R2 (NO)	Unused
-	GND S1	N	Unused
S2	Sensor 2 Target	R2' (NC)	Unused
-	GND S2	R1	Actuator
S3	Sensor 3 (optional)	N	Actuator neutral conductor N
-	GND S3	N	Neutral conductor N
S4	Sensor 4 (optional)	L	Outer conductor L
-	GND S4		
<i>The polarity of sensors S1-S4 is arbitrary.</i>			
V1	0-10V/ PWM		
-	GND V1		

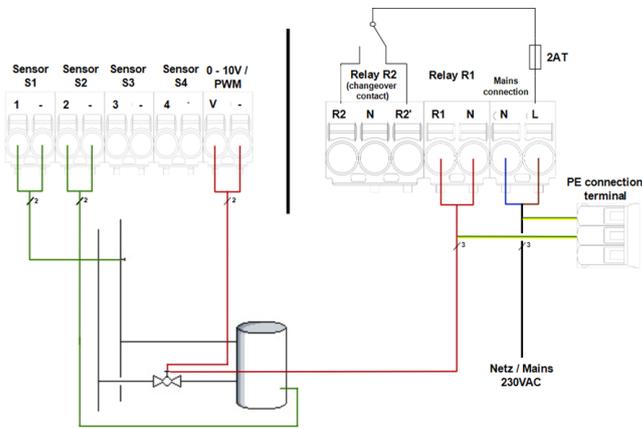

Program 8 Shutoff valve




Low Voltage
max. 12VDC



Mains voltages
230VAC 50-60Hz

Terminal:	Connection:	Terminal:	Connection:
S1	Sensor 1 flow	R2 (NO)	Unused
-	GND S1	N	Unused
S2	Sensor 2 storage	R2' (NC)	Unused
-	GND S2	R1	Shutoff valve
S3	Sensor 3 (optional)	N	Stop valve neutral conductor N
-	GND S3	N	Neutral conductor N
S4	Sensor 4 (optional)	L	Outer conductor L
-	GND S4		
<i>The polarity of sensors S1-S4 is arbitrary.</i>			
V1	0-10V/ PWM		
-	GND V1		

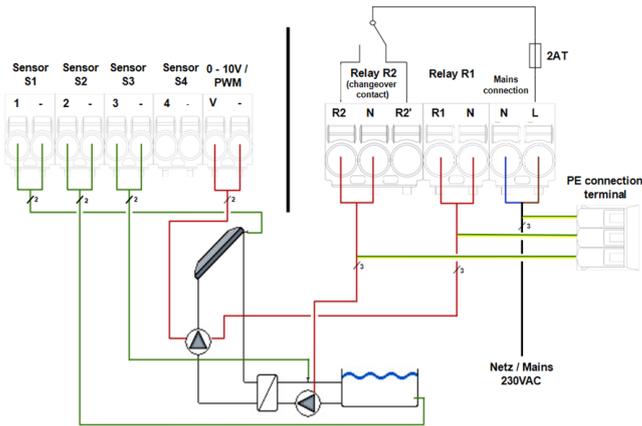

Both pumps are connected to the same relay.

Program 9 Solar with heat exchanger and pool




Low Voltage
max. 12VDC



Mains voltages
230VAC 50-60Hz

Terminal:	Connection:	Terminal:	Connection:
S1	Sensor 1 collector	R2 (NO)	Secondary pump
-	GND S1	N	Secondary pump neutral conductor N
S2	Sensor 2 pool	R2' (NC)	Unused
-	GND S2	R1	Solar pump
S3	Sensor 3 secondary circuit	N	Solar pump neutral conductor N
-	GND S3	N	Neutral conductor N
S4	Sensor 4 (optional)	L	Outer conductor L
-	GND S4		
<i>The polarity of sensors S1-S4 is arbitrary.</i>			
V1	0-10V/ PWM		
-	GND V1		

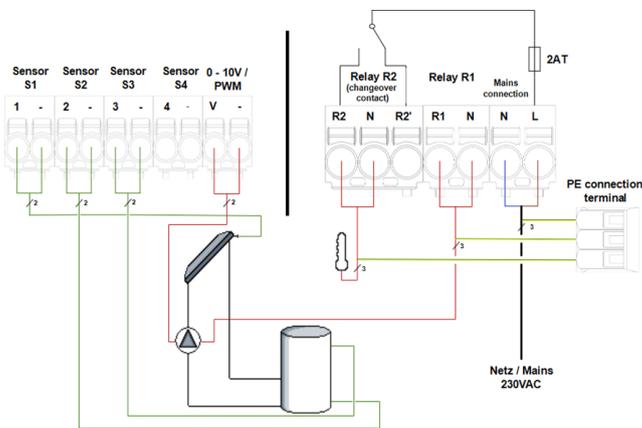

Programme 10 Solar + thermostat




Low Voltage
max. 12VDC



Mains voltages
230VAC 50-60Hz

Terminal:	Connection:	Terminal:	Connection:
S1	Sensor 1 collector	R2 (NO)	Thermostat
-	GND S1	N	Thermostat neutral conductor N
S2	Sensor 2 storage bottom	R2' (NC)	Unused
-	GND S2	R1	Solar pump
S3	Sensor 3 storage top	N	Solar pump neutral conductor N
-	GND S3	N	Neutral conductor N
S4	Sensor 4 (optional)	L	Outer conductor L
-	GND S4		
<i>The polarity of sensors S1-S4 is arbitrary.</i>			
V1	0-10V/ PWM		
-	GND V1		

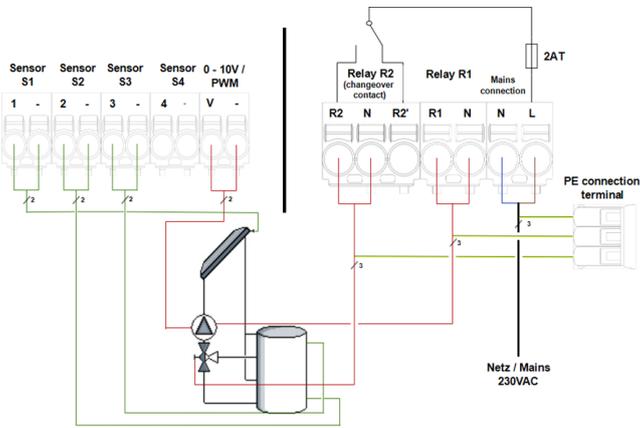

Programme 11 Solar + zone storage valve




Low Voltage
max. 12VDC



Mains voltages
230VAC 50-60Hz

Terminal:	Connection:	Terminal:	Connection:
S1	Sensor 1 collector	R2 (NO)	Zone storage valve
-	GND S1	N	Zone storage valve N
S2	Sensor 2 storage bottom	R2' (NC)	Unused
-	GND S2	R1	Solar pump
S3	Sensor 3 storage top	N	Solar pump neutral conductor N
-	GND S3	N	Neutral conductor N
S4	Sensor 4 (optional)	L	Outer conductor L
-	GND S4		
<i>The polarity of sensors S1-S4 is arbitrary.</i>			
V1	0-10V/ PWM		
-	GND V1		

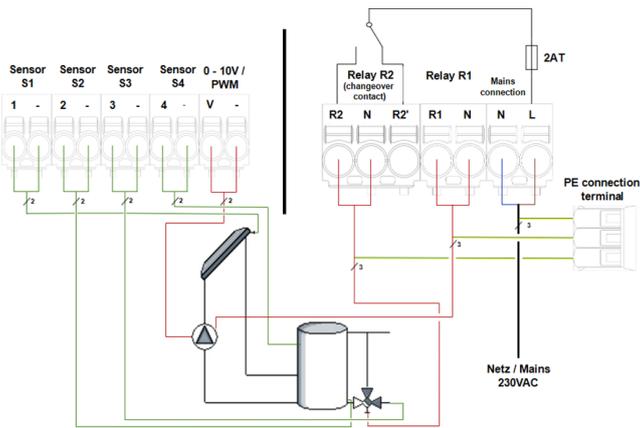

Programme 12 Solar + HC return increase




Low Voltage
max. 12VDC



Mains voltages
230VAC 50-60Hz

Terminal:	Connection:	Terminal:	Connection:
S1	Sensor 1 collector	R2 (NO)	Return increase
-	GND S1	N	Return increase neutral conductor N
S2	Sensor 2 storage bottom	R2' (NC)	Unused
-	GND S2	R1	Solar pump
S3	Sensor 3 Return	N	Solar pump neutral conductor N
-	GND S3	N	Neutral conductor N
S4	Sensor 4 storage top	L	Outer conductor L
-	GND S4		
<i>The polarity of sensors S1-S4 is arbitrary.</i>			
V1	0-10V/ PWM		
-	GND V1		

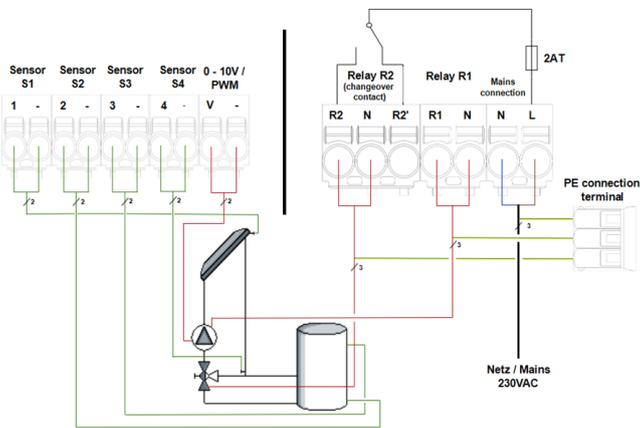

Programme 13 Solar + Bypass




Low Voltage
max. 12VDC



Mains voltages
230VAC 50-60Hz

Terminal:	Connection:	Terminal:	Connection:
S1	Sensor 1 collector	R2 (NO)	Bypass
-	GND S1	N	Bypass neutral conductor N
S2	Sensor 2 storage bottom	R2' (NC)	Unused
-	GND S2	R1	Solar pump
S3	Sensor 3 storage top	N	Solar pump neutral conductor N
-	GND S3	N	Neutral conductor N
S4	Sensor 4 flow temperature sensor	L	Outer conductor L
-	GND S4		
<i>The polarity of sensors S1-S4 is arbitrary.</i>			
V1	0-10V/ PWM		
-	GND V1		

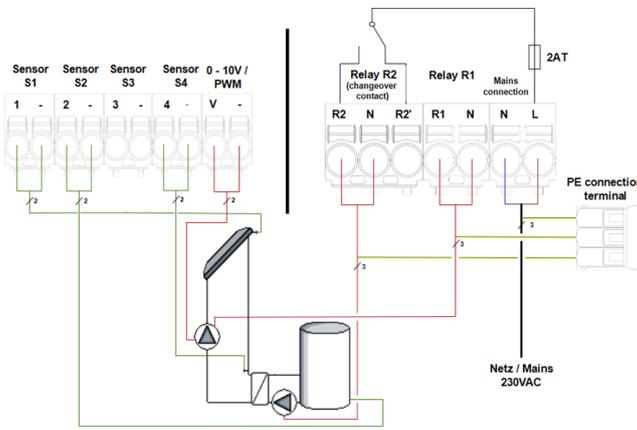

Programme 14 Solar + heat exchanger




Low Voltage
max. 12VDC



Mains voltages
230VAC 50-60Hz

Terminal:	Connection:	Terminal:	Connection:
S1	Sensor 1 collector	R2 (NO)	Secondary pump
-	GND S1	N	Secondary pump neutral conductor N
S2	Sensor 2 storage bottom	R2' (NC)	Unused
-	GND S2	R1	Solar pump neutral conductor N
S3	Sensor 3 (optional)	N	Solar pump
-	GND S3	N	Neutral conductor N
S4	Sensor 4 flow temperature sensor	L	Outer conductor L
-	GND S4		
<i>The polarity of sensors S1-S4 is arbitrary.</i>			
V1	0-10V/ PWM		
-	GND V1		

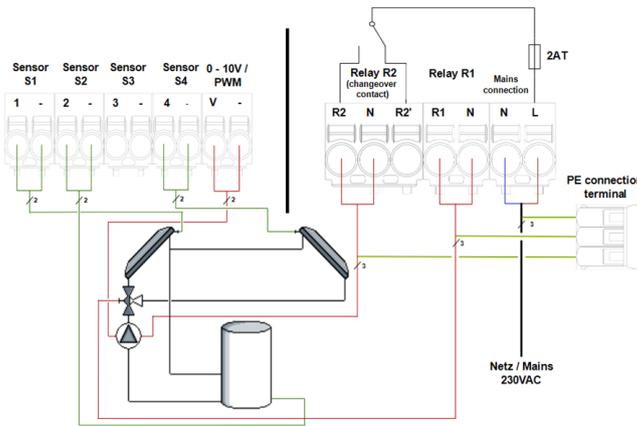

Programme 15 solar + 2 collector valve




Low Voltage
max. 12VDC



Mains voltages
230VAC 50-60Hz

Terminal:	Connection:	Terminal:	Connection:
S1	Sensor 1 Collector 2	R2 (NO)	valve
-	GND S1	N	Valve neutral conductor N
S2	Sensor 2 storage bottom	R2' (NC)	Unused
-	GND S2	R1	Solar pump
S3	Sensor 3 (optional)	N	Solar pump neutral conductor N
-	GND S3	N	Neutral conductor N
S4	Sensor 4 Collector 2	L	Outer conductor L
-	GND S4		
<i>The polarity of sensors S1-S4 is arbitrary.</i>			
V1	0-10V/ PWM		
-	GND V1		

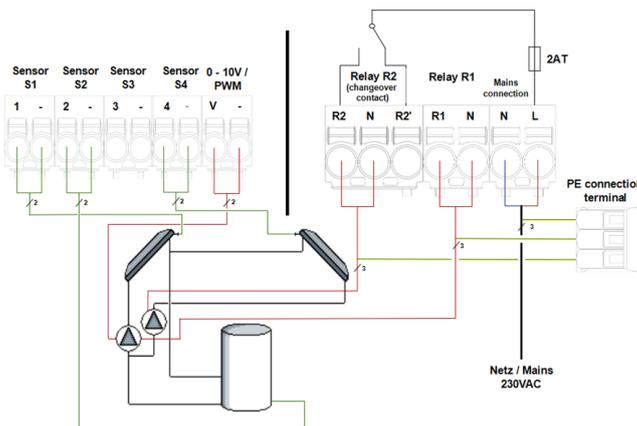

Programme 16 solar + 2 collector pump




Low Voltage
max. 12VDC



Mains voltages
230VAC 50-60Hz

Terminal:	Connection:	Terminal:	Connection:
S1	Sensor 1 Collector 1	R2 (NO)	Solar pump 2
-	GND S1	N	Solar pump 2 neutral conductor N
S2	Sensor 2 storage bottom	R2' (NC)	Unused
-	GND S2	R1	Solar pump 1
S3	Sensor 3 (optional)	N	Solar pump 1 neutral conductor N
-	GND S3	N	Neutral conductor N
S4	Sensor 4 Collector 2	L	Outer conductor L
-	GND S4		
<i>The polarity of sensors S1-S4 is arbitrary.</i>			
V1	0-10V/ PWM		
-	GND V1		

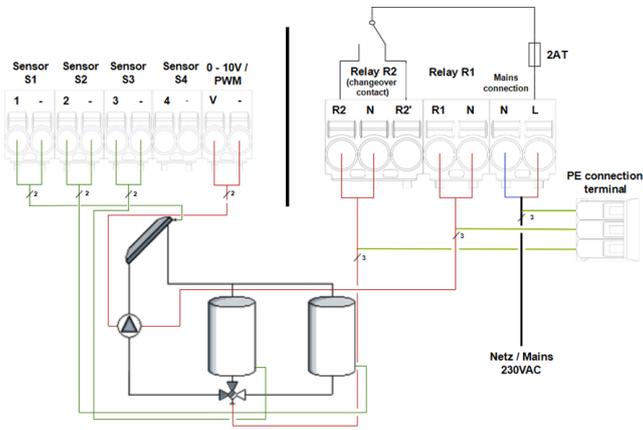

Programme 17 Solar + 2 storage valves




Low Voltage
max. 12VDC



Mains voltages
230VAC 50-60Hz

Terminal:	Connection:	Terminal:	Connection:
S1	Sensor 1 collector	R2 (NO)	valve
-	GND S1	N	Valve neutral conductor N
S2	Sensor 2 storage 1 bottom	R2' (NC)	Unused
-	GND S2	R1	Solar pump N
S3	Sensor 3 Storage 2 bottom	N	Solar pump neutral conductor N
-	GND S3	N	Neutral conductor N
S4	Sensor 4 (optional)	L	Outer conductor L
-	GND S4		
<i>The polarity of sensors S1-S4 is arbitrary.</i>			
V1	0-10V/ PWM		
-	GND V1		

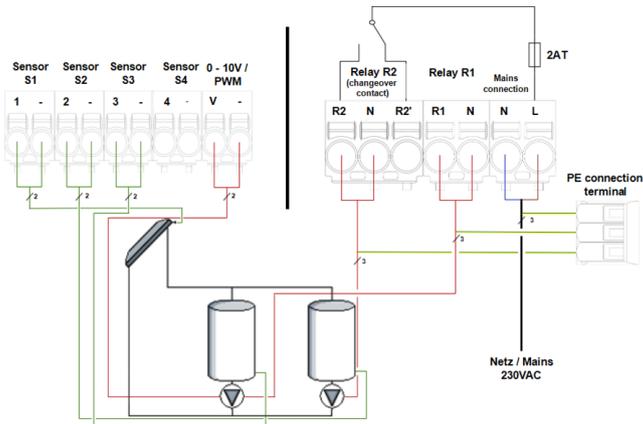

Programme 18 Solar + 2 storage pump




Low Voltage
max. 12VDC



Mains voltages
230VAC 50-60Hz

Terminal:	Connection:	Terminal:	Connection:
S1	Sensor 1 collector	R2 (NO)	Storage pump 2
-	GND S1	N	Storage pump 2 Neutral conductor N
S2	Sensor 2 storage 1 bottom	R2' (NC)	Unused
-	GND S2	R1	Storage pump 1 neutral conductor N
S3	Sensor 3 Storage 2 bottom	N	Storage pump
-	GND S3	N	Neutral conductor N
S4	Sensor 4 (optional)	L	Outer conductor L
-	GND S4		
<i>The polarity of sensors S1-S4 is arbitrary.</i>			
V1	0-10V/ PWM		
-	GND V1		

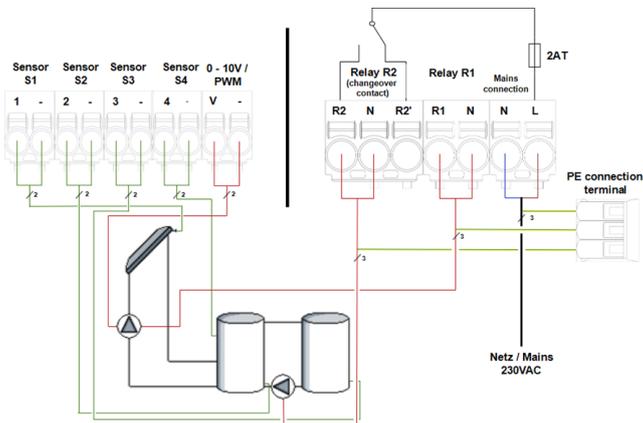

Programme 19 Solar + Transfer




Low Voltage
max. 12VDC



Mains voltages
230VAC 50-60Hz

Terminal:	Connection:	Terminal:	Connection:
S1	Sensor 1 collector	R2 (NO)	Storage pump 2
-	GND S1	N	Storage pump 2 Neutral conductor N
S2	Sensor 2 storage 1 bottom	R2' (NC)	Unused
-	GND S2	R1	Solar pump 2
S3	Sensor 3 Storage 2 bottom	N	Solar pump 2 neutral conductor N
-	GND S3	N	Neutral conductor N
S4	Sensor 4 storage 1 top	L	Outer conductor L
-	GND S4		
<i>The polarity of sensors S1-S4 is arbitrary.</i>			
V1	0-10V/ PWM		
-	GND V1		

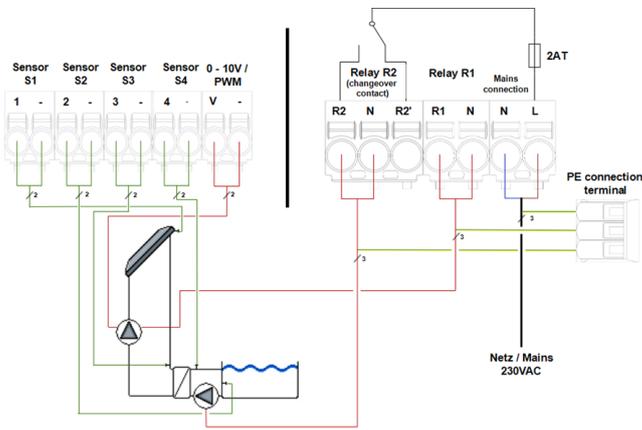

Programme 20 Solar with pool + H.ex. + S3




Low Voltage
max. 12VDC



Mains voltages
230VAC 50-60Hz

Terminal:	Connection:	Terminal:	Connection:
S1	Sensor 1 collector	R2 (NO)	Secondary pump
-	GND S1	N	Secondary pump neutral conductor N
S2	Sensor 2 Pool sensor	R2' (NC)	Unused
-	GND S2	R1	Solar pump
S3	Sensor 3 heat exchanger 1	N	Solar pump neutral conductor N
-	GND S3	N	Neutral conductor N
S4	Sensor 4 heat exchanger 2	L	Outer conductor L
-	GND S4		
<i>The polarity of sensors S1-S4 is arbitrary.</i>			
V1	0-10V/ PWM		
-	GND V1		

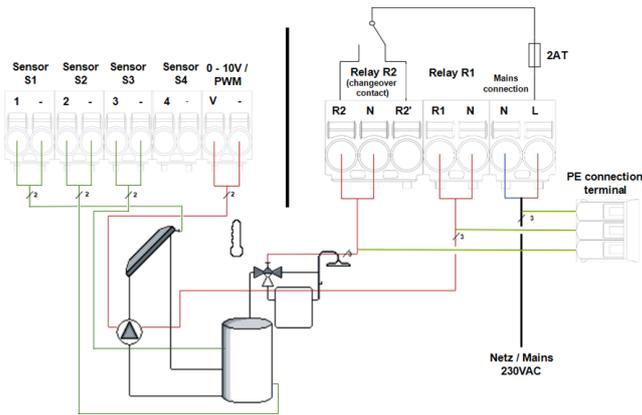

Program 21 Solar with thermostat and switching valve




Low Voltage
max. 12VDC



Mains voltages
230VAC 50-60Hz

Terminal:	Connection:	Terminal:	Connection:
S1	Sensor 1 collector	R2 (NO)	valve
-	GND S1	N	Valve neutral conductor N
S2	Sensor 2 storage bottom	R2' (NC)	Unused
-	GND S2	R1	Solar pump
S3	Sensor 3 storage top	N	Solar pump neutral conductor N
-	GND S3	N	Neutral conductor N
S4	Sensor 4 (optional)	L	Outer conductor L
-	GND S4		
<i>The polarity of sensors S1-S4 is arbitrary.</i>			
V1	0-10V/ PWM		
-	GND V1		

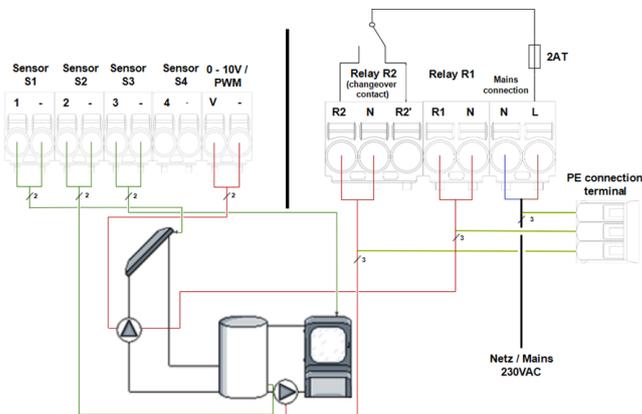

Program 22 Solar and solid-fuel boiler



Low Voltage
max. 12VDC



Mains voltages
230VAC 50-60Hz

Terminal:	Connection:	Terminal:	Connection:
S1	Sensor 1 collector	R2 (NO)	Boiler pump
-	GND S1	N	Boiler pump neutral conductor N
S2	Sensor 2 storage bottom	R2' (NC)	Unused
-	GND S2	R1	Solar pump
S3	Sensor 3 Solid fuel boiler sensor	N	Solar pump neutral conductor N
-	GND S3	N	Neutral conductor N
S4	Sensor 4 (optional)	L	Outer conductor L
-	GND S4		
<i>The polarity of sensors S1-S4 is arbitrary.</i>			
V1	0-10V/ PWM		
-	GND V1		

Programme 23 Solar + Field Cooling



Low Voltage
max. 12VDC





Mains voltages
230VAC 50-60Hz

Terminal:	Connection:	Terminal:	Connection:
S1	Sensor 1 collector	R2 (NO)	Field cooling
-	GND S1	N	Field cooling neutral conductor N
S2	Sensor 2 storage bottom	R2' (NC)	Unused
-	GND S2	R1	Solar pump
S3	Sensor 3 (optional)	N	Solar pump neutral conductor N
-	GND S3	N	Neutral conductor N
S4	Sensor 4 (optional)	L	Outer conductor L
-	GND S4		

The polarity of the sensors S1-S3 is freely selectable.

V1	0-10V/ PWM		
-	GND V1		

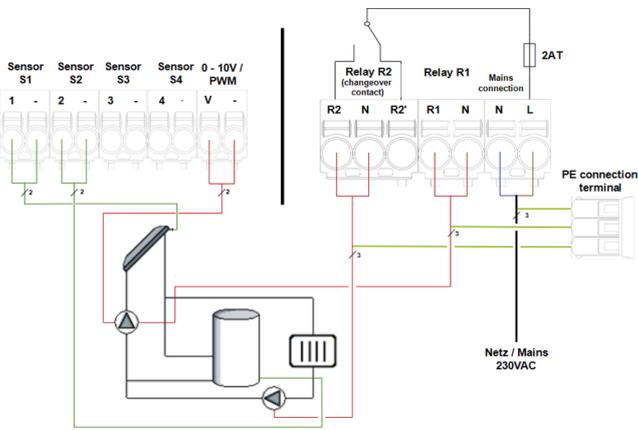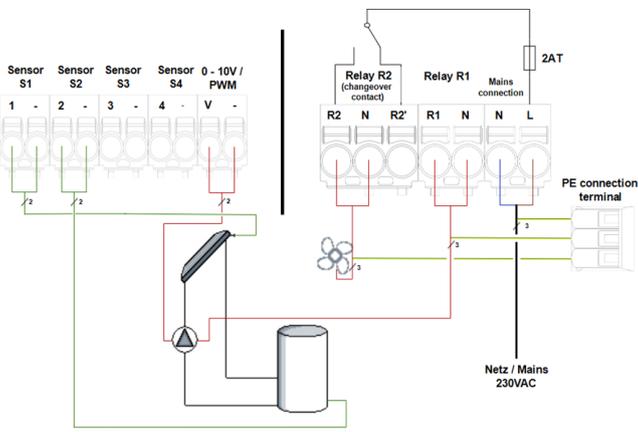

Programme 24 Solar + Passive cooling



Low Voltage
max. 12VDC




Mains voltages
230VAC 50-60Hz

Terminal:	Connection:	Terminal:	Connection:
S1	Sensor 1 collector	R2 (NO)	Passive cooling
-	GND S1	N	Passive cooling neutral conductor N
S2	Sensor 2 storage bottom	R2' (NC)	Unused
-	GND S2	R1	Solar pump
S3	Sensor 3 (optional)	N	Solar pump neutral conductor N
-	GND S3	N	Neutral conductor N
S4	Sensor 4 (optional)	L	Outer conductor L
-	GND S4		

The polarity of sensors S1-S4 is arbitrary.

V1	0-10V/ PWM		
-	GND V1		

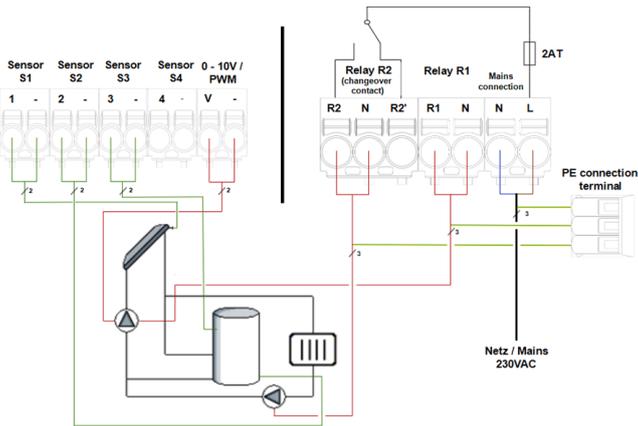

Programme 25 Solar + storage cooling



Low Voltage
max. 12VDC




Mains voltages
230VAC 50-60Hz

Terminal:	Connection:	Terminal:	Connection:
S1	Sensor 1 collector	R2 (NO)	Storage cooling
-	GND S1	N	Storage cooling neutral conductor N
S2	Sensor 2 storage bottom	R2' (NC)	Unused
-	GND S2	R1	Solar pump
S3	Sensor 3 storage top	N	Solar pump neutral conductor N
-	GND S3	N	Neutral conductor N
S4	Sensor 4 (optional)	L	Outer conductor L
-	GND S4		

The polarity of sensors S1-S4 is arbitrary.

V1	0-10V/ PWM		
-	GND V1		

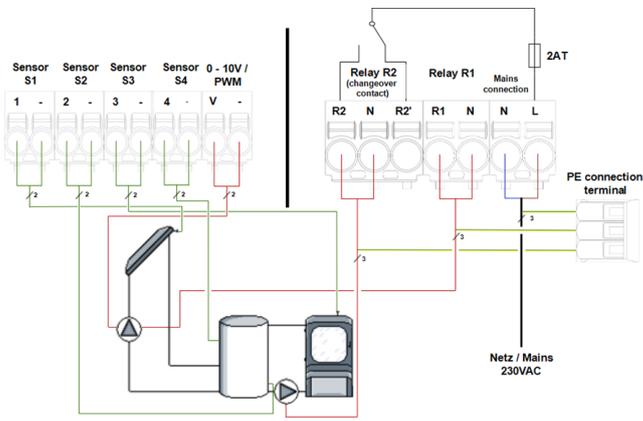

Programme 26 Solar + solid fuel boiler + S4




Low Voltage
max. 12VDC



Mains voltages
230VAC 50-60Hz

Terminal:	Connection:	Terminal:	Connection:
S1	Sensor 1 collector	R2 (NO)	Boiler pump
-	GND S1	N	Boiler pump neutral conductor N
S2	Sensor 2 storage bottom	R2' (NC)	Unused
-	GND S2	R1	Solar pump
S3	Sensor 3 Solid fuel boiler	N	Solar pump neutral conductor N sensor
-	GND S3	N	Neutral conductor N
S4	Sensor 4 storage top	L	Outer conductor L
-	GND S4		
<i>The polarity of sensors S1-S4 is arbitrary.</i>			
V1	0-10V/ PWM		
-	GND V1		

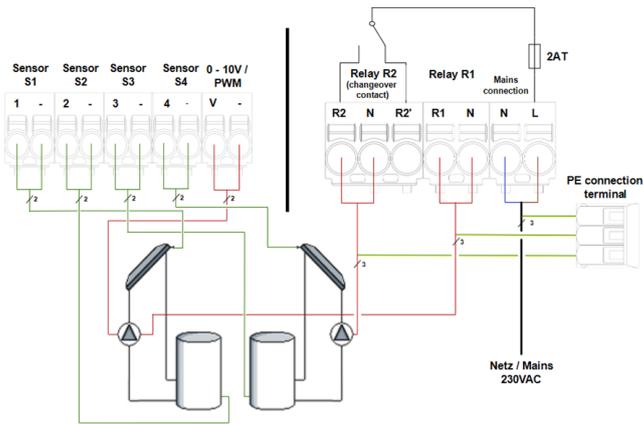

Programme 27 Solar thermal 2x




Low Voltage
max. 12VDC



Mains voltages
230VAC 50-60Hz


Terminal:	Connection:	Terminal:	Connection:
S1	Sensor 1 Collector 1	R2 (NO)	Boiler pump
-	GND S1	N	Boiler pump neutral conductor N
S2	Sensor 2 storage 1 bottom	R2' (NC)	Unused
-	GND S2	N	Solar pump
S3	Sensor 3 Storage 2 bottom	R2	Solar pump neutral conductor N
-	GND S3	N	Neutral conductor N
S4	Sensor 4 Collector 2	L	Outer conductor L
-	GND S4		
<i>The polarity of sensors S1-S4 is arbitrary.</i>			
V1	0-10V/ PWM		
-	GND V1		

Display and Input

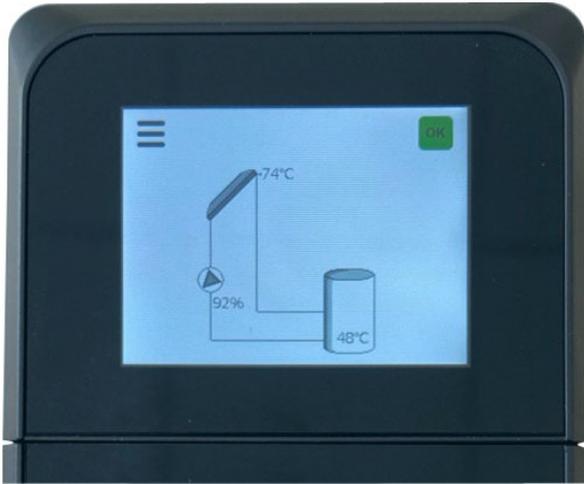



The TFT colour display with extensive text and graphics mode makes the controller easy to operate.

Input is made via the buttons or icons on the touch display, which are assigned different functions depending on the situation. Use the back button (<) at the top left to return to the previous menu level. If applicable, a request for confirmation appears to save the made changes.

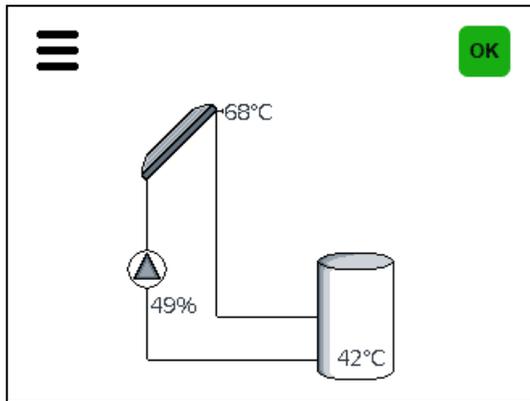

Graphic mode appears if no button is pressed for 2 minutes or if the main menu is exited via the Back button.


	Pump (rotates during operation)
	Valve (flow direction black)
	Shutoff valve
	Collector
	Storage
	Solid fuel boiler
	Pool
	Thermostat
	Temperature Sensors
	Heat exchanger
	System status OK
	System status info
	System status error message

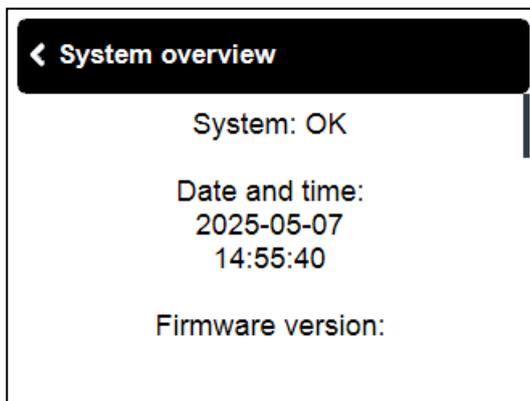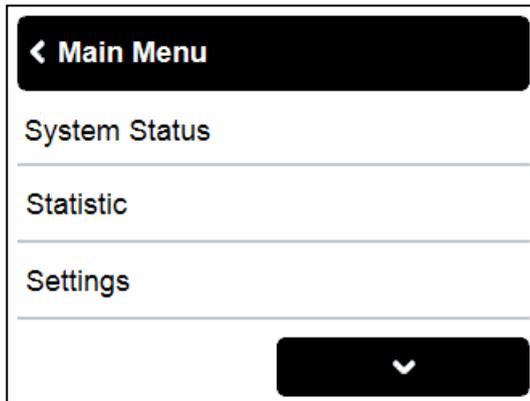

The system overview with all sensor values and device details can be found in the main menu under System status. Use the 'Back' button at the top left to return to the previous view.

Commissioning help

When the device is switched on for the first time or after loading the factory settings, the commissioning wizard appears. It guides you through the necessary basic settings in the correct order, with the respective parameters being briefly explained on the display.

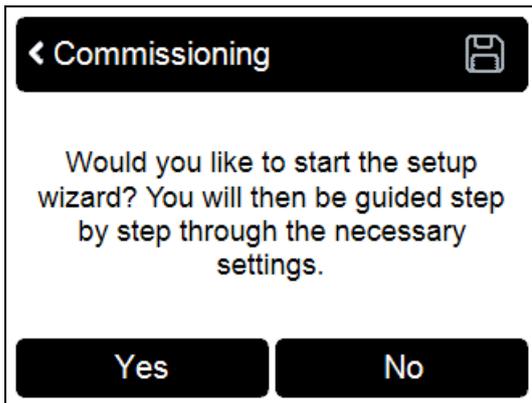

1. Set language and time
2. Commissioning help / setup wizard
 - a) agree / disagree or
 - b) skip.


The setup wizard guides through the necessary basic settings in the correct order. Every parameter is explained on the display of the controller. The back button at the top left takes you back to the previous screen.

b) With free commissioning the settings should be made in the following order:

- Settings, all values
- Protection Functions (if any adjustments necessary).
- Special Functions (if any adjustments necessary).

3. in the Manual operation menu, test the switching outputs with a connected load and check the sensor values for plausibility.

System Status

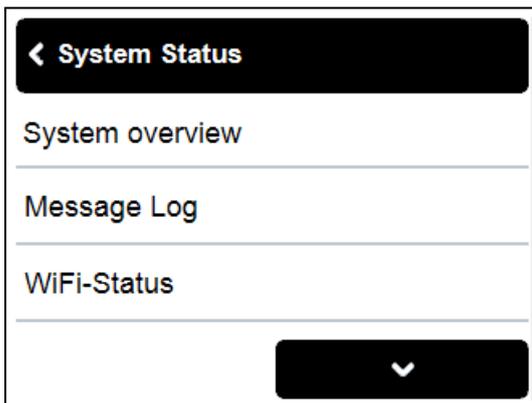

The menu contains the system overview, messages, the WiFi and MQTT status and the support release.

System overview

Display of the system status, firmware version, assignment of the inputs and outputs and the heat quantity.

Message Log

Display of the error memory and informative messages.

WiFi-Status

Information on the WiFi status and IP address.

MQTT status


Information on the MQTT status.

Support authorization

Provides an easy way to authorise manufacturer support to access the controller remotely. The manufacturer support is added to the 'Manage access' list and receives the device address by e-mail.

Additional authorised users can be added or edited at any time via "Settings > Network > WiFi > Manage access".

Statistic

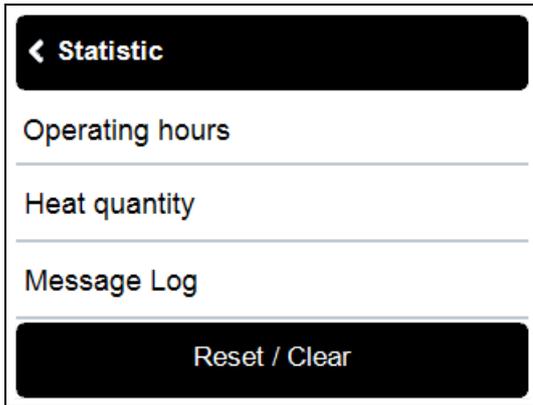

The menu contains information on the operating hours, the amount of heat, current messages and the option to reset the saved data.

Operating hours

Display of operating hours of the consumers connected to the controller, e.g. solar pumps or valves. Different time ranges (day-years) are available.

Heat quantity

Display of thermal energy in kWh.



This figure is an approximate value.


Message Log

Display of the error memory and informative messages.

Reset / Delete

Reset the saved data. Selecting ,all statistics' clears everything except the messages.

Settings

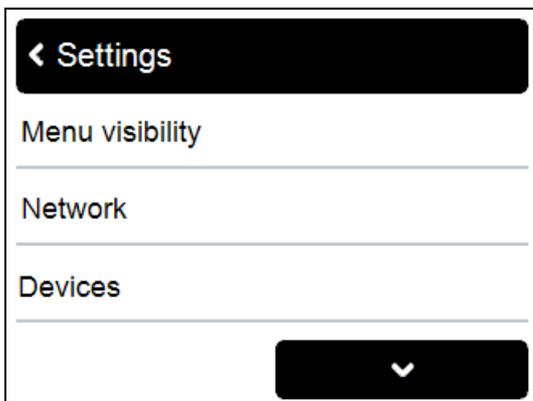

The basic settings required for the control function are made.



By no means does the controller replace the safety appliances on site!


Menu visibility

Show/hide some menu items. The following settings are possible:

Protected = severely restricted menu view. Date, time and basic settings are possible.

Expert = All menu items required by the installer for commissioning are visible.

Manufacturer = Password-protected area with extended setting and analysis options.

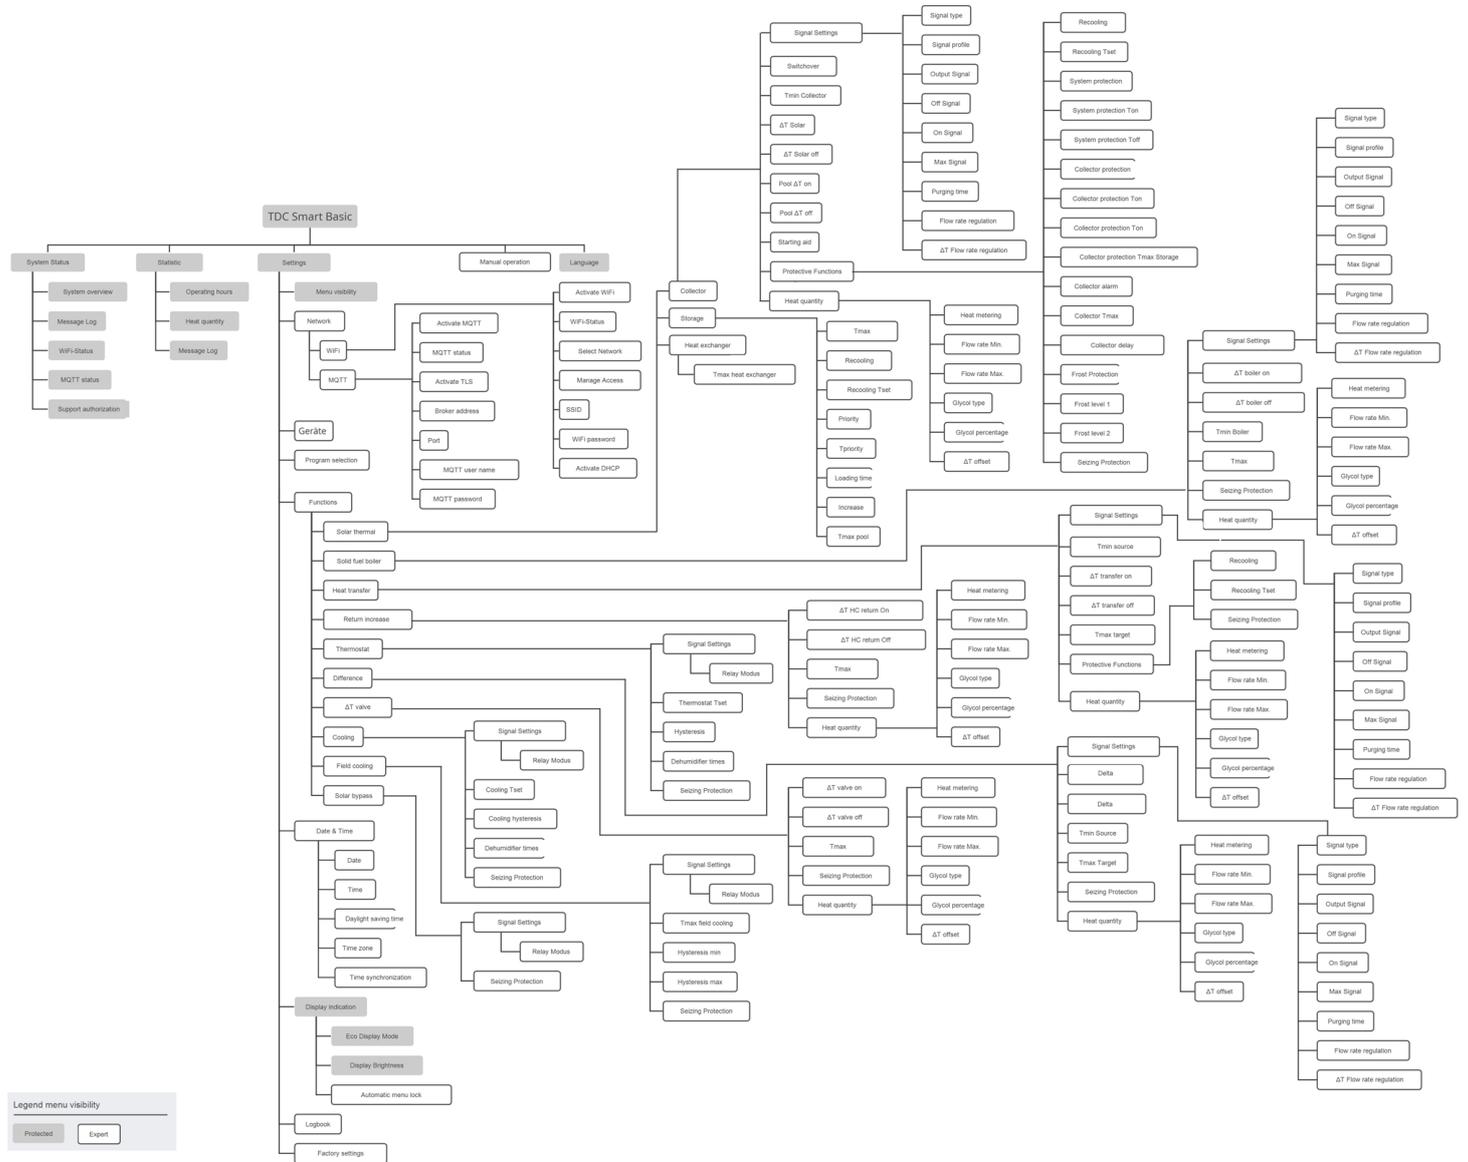

Network

Settings for the WiFi and MQTT are made here.

WiFi

Activate WiFi

Activate WiFi to enable internet functions such as app access, firmware updates or automatic time synchronisation.

WiFi-Status

Information on the WiFi status and IP address.

Select Network

Scan for available networks and select the network.

Manage Access

Store up to 5 email addresses that are permitted to access the controller via the SOREL Connect app.

SSID

Manual entry of the SSID

WiFi password

Entering the WiFi password

Activate DHCP

When Auto-configuration is enabled, the device searches the network for a DHCP server that assigns it an IP address, subnet mask, gateway IP, and DNS server IP. If you deactivate the auto configuration (DHCP), you will have to make the required network settings manually!

MQTT

Activate MQTT

Enable sending data using the MQTT protocol.

Activate TLS

Activate encryption via TSL.

Broker address

Enter the broker address (target address) for data communication via MQTT. This is set to mqtt.sorel.de by default, but can be adjusted for other applications, such as connection to smart home systems.

Port

Enter the port. Factory settings 8883

MQTT user name

Enter the MQTT user name. Is assigned ex works and corresponds to the device address in WiFi status.

MQTT password

Enter the MQTT password. Awarded ex works. If the password is lost, the MQTT connection can be restored by loading the factory settings.

Devices

Display of the devices, their resources and firmware version as well as updating the firmware.

Program selection

The appropriate hydraulic variant for the respective application is selected here, which serves as the basis for later adaptations according to the desired application.

 The program selection normally occurs only once during the first entry into service by a specialist. An incorrect program selection may lead to unpredictable errors.

Functions

Solar thermal

Controls a solar pump depending on the collector and storage temperature.

Collector

Signal Settings

Signal type

Menu item appears if a signal output has been selected as the output.

Selection (0 - 10 V, PWM) of the control

0 - 10V = voltage signal

PWM = square wave signal

Signal profile

Select signal profile (manual, valve, solar, heating)

Output Signal

Inverted: small signal = pump running at high power

Normal: small signal = pump runs at low power

Off Signal

Signal to switch off the target device

On Signal

Signal to switch on the target device at minimum power

Max Signal

Signal to set target device to maximum power.

Purging time

For this time, the pump runs with its full speed (100%) in order to guarantee a secure start-up. Only after expiration of this purging time will the pump have a controlled speed and will switch, depending on the set variant, to the max. or min. speed. Speed.

Flow rate regulation

Modulation (slow, medium, fast, off) of the output for flow rate regulation.

ΔT Flow rate regulation

Setpoint difference for flow rate regulation

Switchover

Selection of collector switching via pump or valve.

Tmin Collector

Minimum temperature at solar collector for release.

If this value on the specified sensor is exceeded and the other conditions are fulfilled, the controller will turn on the affiliated pump or the valve. If the temperature on the sensor falls 5 °C below this value, the pump or the valve will be turned off again.

ΔT Solar

Switch-on temperature difference for solar loading

If the temperature difference ΔT solar between the reference sensors is exceeded and the other conditions are fulfilled, the controller will turn on the pump/valve on the corresponding relay. If the temperature difference falls to ΔT Off, the pump / valve is switched off again.

ΔT Solar off

Switch-off temperature for solar loading between the solar collector and storage.

Pool ΔT on

Switch-on ΔT for filling the pool.

Pool ΔT off

Switch-off ΔT to stop filling the pool.

Starting aid

For some solar systems, in particular for vacuum tube collectors, the measurement recording on the collector sensors may be too slow or imprecise, because the sensor is often not on the warmest spot. With activated starting aid, the following process takes place: If the temperature at the collector sensor rises by the value specified under 'Increase' within 5 minutes, the solar pump is switched on for the set 'flushing time' so that the medium to be measured is transported to the collector sensor. If there is still no normal switching condition through this, there will be a 5 minute block time for the start wizard function.

 This function should only be activated by a technician if problems occur with the measurement recording. Observe in particular the instructions from the collector manufacturer.

Purging time

If the temperature at the collector sensor rises by the value specified under 'increase' within 5 minutes, the solar pump is switched on for the set 'flushing time' so that the medium to be measured is transported to the collector sensor. If the set ΔT is not reached, a 5-minute circulation pause time for the starting aid function will apply.

Increase

If the temperature at the collector rises by the value set here within 5 minutes, the solar pump is switched on for the duration of the flushing time.

Protective Functions

Recooling

Recooling cools an overheated storage via the collector.

 Energy is lost through the collector through this function! The recooling should only be activated in cases of exception, with low heat acceptance, for example, during vacation.

System protection

Priority protection function

The system protection should prevent an overheating of the components installed in the system through the forced shut down of the solar circulation pump. If the value "AS Ton" on the collector has been exceeded for 1 Min. the pump will be turned off and not turn on again in order to protect the collector, for example, from steam. The pump will only be switched on again, when the collector temperature falls below "SP Toff".

 With the system protection (on), there are increased standstill temperatures in the solar collector and therefore an increased pressure in the system. The operating manuals from the system components must be observed.

System protection Ton

If the value "SP Ton" is exceeded at the collector, the pump is switched off after 60 seconds and will not be switched on again, in order to protect the collector e.g. from steam hammering.

System protection Toff

If the collector falls below the 'System protection Taus' value, the pump is switched on again.

Collector protection

Priority protection function

The collector protection prevents the collector from overheating. A forced switching of the pump makes sure that the collector is cooled through the storage. If the value "KS Ton" is exceeded on the collector, the pump will be turned on in order to cool the collector. The pump is shut down if the value "KS Toff" on the collector is not met or the value "KS Tmax Sp." on the storage is exceeded.

 System protection has priority over collector protection! Even if the switch requirements for the collector protection are present, the solar circulation pump is turned off once "AS T on" is reached. Normally the values from the system protection (depending on the maximum temperature of the storage or other components) are higher than the collector protection.

Collector alarm

If this temperature at the collector sensor is exceeded when the solar pump is turned on, a warning or error notification is triggered.

Frost Protection

A 2-level frost protection function can be activated. In level 1, the controller turns on the pump every hour for 1 minute if the collector temperature is below the set value "Frost Level 1". If the collector temperature continues to decrease to the set value "Frost Level 2", the controller will turn on the pump without disruption. If the collector temperature exceeds the value "Frost level 2" by 2 °C, the pump will turn off again.

 Energy is lost through the collector through this function! It is normally not activated for solar systems with antifreeze. The operating manuals from the other system components must be observed.

Seizing Protection

If the anti-seizing protection is activated, the controller switches the relevant output and the connected consumer daily at 12:00 noon or weekly on Sundays at 12:00 for 5 seconds to prevent seizing of the pump/valve after long periods of inactivity.

Heat quantity

Heat metering

Heat metering settings with relative flow rate

Flow rate Min.

Flow rate of the system at the minimum speed signal.

Flow rate Max.

Flow rate of the system at maximum speed signal.

Glycol type

Type of antifreeze

Glycol percentage

Antifreeze content

ΔT offset

Correction factor for the temperature difference for heat metering

Storage

Tmax

Maximum temperature in storage to switch off

If this value is exceeded at the specified sensor, the controller turn off the affiliated pump or the valve. If this value on the sensor is below and the other conditions are fulfilled, the controller will turn on the pump or the valve.



Temperature values which are set too high can lead to scalding or damage to the system. Scalding protection must be provided by the customer!

Priority

Priority determines whether this storage is loaded with priority above TVorrang.

Tpriority

Absolute priority up to this temperature.

Loading time

Time until checking whether switching back to priority storage is possible again.

Increase

Extends the charging pause of the secondary storage when the collector temperature rises quickly enough.

Tmax pool

Switch-off temperature at pool sensor.

If this value is exceeded at the pool sensor, the controller turn off the affiliated pump or the valve. If this value on the pool sensor is below and the other conditions are fulfilled, the controller will turn on the pump or the valve.



Temperature values which are set too high can lead to scalding or damage to the system. Scalding protection must be provided by the customer!

In multiple storage systems, if the shut-down temperature at the pool sensor is exceeded, a downstream installed storage or storage area is switched to.

Recooling

Recooling cools an overheated storage via the collector.



Energy is lost through the collector through this function! The recooling should only be activated in cases of exception, with low heat acceptance, for example, during vacation.

Recooling Tset

If this value is exceeded, recooling is activated.

Heat exchanger

Tmax heat exchanger

Maximum permitted temperature at the heat exchanger.

Solid fuel boiler

In solid-fuel boiler function, a pump is controlled with a assigned relay, which loads the heat energy from a solid-fuel boiler into a storage tank. The solid-fuel boiler function controls the loading pump of a solid-fuel boiler based on the temperature difference between the solid-fuel boiler sensor and the storage sensor. If a control output (V1 or V2, ...) is used with this function, a speed control with a PWM / 0-10V HE pump is possible.

Signal Settings

Signal type

Menu item appears if a signal output has been selected as the output.

Selection (0 - 10 V, PWM) of the control

0 - 10V = voltage signal

PWM = square wave signal

Signal profile

Select signal profile (manual, valve, solar, heating)

Output Signal

Inverted: small signal = pump running at high power

Normal: small signal = pump runs at low power

Off Signal

Signal to switch off the target device

On Signal

Signal to switch on the target device at minimum power

Max Signal

Signal to set target device to maximum power.

Flow rate regulation

Modulation (slow, medium, fast, off) of the output for flow rate regulation.

ΔT Flow rate regulation

Setpoint difference for flow rate regulation

ΔT boiler off

Switch-on difference between solid fuel boiler and storage

If the temperature difference between the sensors defined for this function exceeds the value set here (ΔT solid fuel boiler **On**), the function switches the assigned output (relay or signal output) **On**.

ΔT boiler off

Switch-off difference between solid fuel boiler and storage

If the temperature difference (ΔT solid fuel boiler **off**) between the solid fuel boiler and Storage falls below the set temperature difference, the function switches the assigned output (relay or signal output) **off**.

Tmin Boiler

Minimum temperature in the solid fuel boiler to switch on the pump

If the temperature at the solid fuel boiler sensor exceeds the temperature set here, the relay switches on the pump, if the other starting conditions are met. Below the solids boiler Tmin temperature, the solids boiler function is deactivated.

Tmax

Maximum temperature in Storage

If this is exceeded, the relay is switched off.

Seizing Protection

If the anti-seizing protection is activated (daily, weekly, off), the controller switches the outputs on/off at 01:00 noon for 5 seconds to prevent seizing of the pump/valve after long periods of inactivity.

Heat quantity

Heat metering

Heat metering settings with relative flow rate

Flow rate Min.

Flow rate of the system at the minimum speed signal.

Flow rate Max.

Flow rate of the system at maximum speed signal.

Glycol type

Type of antifreeze

Glycol percentage

Antifreeze content

 ΔT offset

Correction factor for the temperature difference for heat metering

Heat transfer

With this function, energy from one storage can be loaded in another.

Signal Settings**Signal type**

Menu item appears if a signal output has been selected as the output.

Selection (0 - 10 V, PWM) of the control

0 - 10V = voltage signal

PWM = square wave signal

Signal profile

Select signal profile (manual, valve, solar, heating)

Output Signal

Inverted: small signal = pump running at high power

Normal: small signal = pump runs at low power

Off Signal

Signal to switch off the target device

On Signal

Signal to switch on the target device at minimum power

Max Signal

Signal to set target device to maximum power.

Purging time

For this time, the pump runs with its full speed (100%) in order to guarantee a secure start-up. Only after expiration of this purging time will the pump have a controlled speed and will switch, depending on the set variant, to the max. or min. speed. Speed.

Flow rate regulation

Modulation (slow, medium, fast, off) of the output for flow rate regulation.

 ΔT Flow rate regulation

Setpoint difference for flow rate regulation

Tmin source

Minimum temperature in the source storage for the approval of the Heat Transfer.

 ΔT transfer on

ΔT to switch on the heat transfer If the temperature difference between the sensors ΔT transfer On is reached, the relay is switched on.

 ΔT transfer off

ΔT to switch off the heat transfer As soon as the difference falls to ΔT transfer off, the relay is switched off.

Tmax target**Target temperature of the target storage**

If this temperature is measured on the sensor in the target storage, the Heat Transfer will be shut down.

Protective Functions**Recooling**

Recooling cools an overheated storage via the collector.



Energy is lost through the collector through this function! The recooling should only be activated in cases of exception, with low heat acceptance, for example, during vacation.

Recooling Tset

If this value is exceeded, recooling is activated.

Seizing Protection

If the anti-seizing protection is activated (daily, weekly, off), the controller switches the outputs on/off at 01:00 noon for 5 seconds to prevent seizing of the pump/valve after long periods of inactivity.

Heat quantity

Heat metering

Heat metering settings with relative flow rate

Flow rate Min.

Flow rate of the system at the minimum speed signal.

Flow rate Max.

Flow rate of the system at maximum speed signal.

Glycol type

Type of antifreeze

Glycol percentage

Antifreeze content

ΔT offset

Correction factor for the temperature difference for heat metering

Return increase

With this function, for example, the return temperature of a heating circuit is increased through the storage.

ΔT HC return On

ΔT to switch on return increase

The relay is turned on if this temperature difference is exceeded between the storage sensor and the recooling sensor.

ΔT HC return Off

ΔT to switch off return increase

The relay is turned off if this temperature difference is undershot between the storage sensor and the recooling sensor.

Tmax

Maximum temperature set on the storage sensor set for this function. If this temperature is exceeded at the RL storage sensor, the function is deactivated again.

Seizing Protection

If the anti-seizing protection is activated (daily, weekly, off), the controller switches the outputs on/off at 01:00 noon for 5 seconds to prevent seizing of the pump/valve after long periods of inactivity.

Heat quantity

Heat metering

Heat metering settings with relative flow rate

Flow rate Min.

Flow rate of the system at the minimum speed signal.

Flow rate Max.

Flow rate of the system at maximum speed signal.

Glycol type

Type of antifreeze

Glycol percentage

Antifreeze content

ΔT offset

Correction factor for the temperature difference for heat metering

Thermostat

Through the thermostat function, additional energy can be added to the system while being time and temperature controlled. The thermostat function can be used in 2 modes.

"On" = the relay is switched on when all switching conditions are reached

"Inverted" = the relay is switched off when all switching conditions are reached and is otherwise switched on.



Temperature values which are set too high can lead to scalding or damage to the system. Scalding protection must be provided by the customer!



Other values, for example, Teco, apply in economy mode.

Signal Settings

Relay Modus

Selection of the relay mode:

Normally open contact = Normal (NO)

Normally closed contact = Inverted (NC)

Thermostat Tset

The target temperature of the thermostat sensor 1. Below this temperature, the thermostat turns on until Tset+ Hysteresis is reached.

Hysteresis

Hysteresis of set point temperature.

Dehumidifier times

Thermostat activity times

Here the desired periods are set in which the thermostat function is approved. Five times can be entered per weekday, and individual days can also be copied to other days. The thermostat function is shut down outside of the set times.

Seizing Protection

If the anti-seizing protection is activated (daily, weekly, off), the controller switches the outputs on/off at 01:00 noon for 5 seconds to prevent seizing of the pump/valve after long periods of inactivity.

Difference

The assigned relay is activated as soon as there is a preset temperature difference (ΔT difference on/off) between the source and target sensors.

Signal Settings

Signal type

Menu item appears if a signal output has been selected as the output.

Selection (0 - 10 V, PWM) of the control

0 - 10V = voltage signal

PWM = square wave signal

Signal profile

Select signal profile (manual, valve, solar, heating)

Output Signal

Inverted: small signal = pump running at high power

Normal: small signal = pump runs at low power

Off Signal

Signal to switch off the target device

On Signal

Signal to switch on the target device at minimum power

Max Signal

Signal to set target device to maximum power.

Purging time

For this time, the pump runs with its full speed (100%) in order to guarantee a secure start-up. Only after expiration of this purging time will the pump have a controlled speed and will switch, depending on the set variant, to the max. or min. speed. Speed.

Flow rate regulation

Modulation (slow, medium, fast, off) of the output for flow rate regulation.

ΔT Flow rate regulation

Setpoint difference for flow rate regulation

ΔT Difference On

Switch-on difference:

When this temperature difference is reached, the relay switches on.

ΔT Difference Off

Switch off - difference:

If this temperature difference is reached, the relay will switch off.

Tmin Source

Minimum temperature on the source sensor for approval of the difference relay.

If the temperature on the source sensor is below this value, the difference function will not be switched on.

Tmax Target

Maximum temperature at the target sensor for activating the differential relay.

If the temperature at the target sensor exceeds this value, the differential function is not activated.

Seizing Protection

If the anti-seizing protection is activated (daily, weekly, off), the controller switches the outputs on/off at 01:00 noon for 5 seconds to prevent seizing of the pump/valve after long periods of inactivity.

Heat quantity

Heat metering

Heat metering settings with relative flow rate

Flow rate Min.

Flow rate of the system at the minimum speed signal.

Flow rate Max.

Flow rate of the system at maximum speed signal.

Glycol type

Type of antifreeze

Glycol percentage

Antifreeze content

ΔT offset

Correction factor for the temperature difference for heat metering

ΔT valve

ΔT valve on

Switch-on difference:

When this temperature difference is reached, the valve opens.

ΔT valve off

Switch-off difference:

When this temperature difference is reached, the valve closes.

Tmax

Maximum temperature in storage to switch off

If this value is exceeded at the specified sensor, the controller turn off the affiliated pump or the valve. If this value on the sensor is below and the other conditions are fulfilled, the controller will turn on the pump or the valve.



Temperature values which are set too high can lead to scalding or damage to the system. Scalding protection must be provided by the customer!

Seizing Protection

If the anti-seizing protection is activated (daily, weekly, off), the controller switches the outputs on/off at 01:00 noon for 5 seconds to prevent seizing of the pump/valve after long periods of inactivity.

Heat quantity

Heat metering

Heat metering settings with relative flow rate

Flow rate Min.

Flow rate of the system at the minimum speed signal.

Flow rate Max.

Flow rate of the system at maximum speed signal.

Glycol type

Type of antifreeze

Glycol percentage

Antifreeze content

ΔT offset

Correction factor for the temperature difference for heat metering

Cooling

This function is used e.g. to cool down storages to a setpoint temperature in which heat is dissipated.

Signal Settings

Relay Modus

Selection of the relay mode:

Normally open contact = Normal (NO)

Normally closed contact = Inverted (NC)

Cooling Tset

The target temperature of the thermostat sensor 1. Above this temperature, the cooling is activated until Tset + hysteresis is achieved.

Cooling hysteresis

If the temperature at the cooling sensor falls below Tset + hysteresis, the cooling switches off.

Dehumidifier times

Release time for the function

Here, the desired periods can be set in which the function is enabled. Five times can be entered per weekday, and individual days can also be copied to other days. Outside the set times the function is disabled.

Seizing Protection

If the anti-seizing protection is activated (daily, weekly, off), the controller switches the outputs on/off at 01:00 noon for 5 seconds to prevent seizing of the pump/valve after long periods of inactivity.

Field cooling

This function controls an external cooling unit to cool down the collector.

Signal Settings

Relay Modus

Selection of the relay mode:

Normally open contact = Normal (NO)

Normally closed contact = Inverted (NC)

Tmax field cooling

If this temperature is exceeded at the reference sensor of the field cooling, the relay is switched on.

Hysteresis min

If the temperature at the field cooling reference sensor falls below Tmax field cooling + hysteresis min., the relay is switched off.

Hysteresis max

To protect the cooling unit itself from overheating, the relay is switched off when the temperature at the field cooling reference sensor reaches Tmax field cooling + max. hysteresis.

Seizing Protection

If the anti-seizing protection is activated (daily, weekly, off), the controller switches the outputs on/off at 01:00 noon for 5 seconds to prevent seizing of the pump/valve after long periods of inactivity.

Solar bypass

Relay for switching a bypass valve or a bypass pump. With this function, the flow can be guided past the storage if the flow temperature at the bypass sensor is less than in the storage to be filled.

Signal Settings

Relay Modus

Selection of the relay mode:

Normally open contact = Normal (NO)

Normally closed contact = Inverted (NC)

Seizing Protection

If the anti-seizing protection is activated (daily, weekly, off), the controller switches the outputs on/off at 01:00 noon for 5 seconds to prevent seizing of the pump/valve after long periods of inactivity.

Date & Time

The date and time are synchronised with the online time server. If the internet connection is deactivated, the date and time can be reset in this menu.

Date

The current date is set here.

Time

The current time is set here.

Daylight saving time

If this function is activated, the controller automatically changes to winter time or summer time (DST, Daylight Savings Time).

Time zone

Setting the time difference to coordinated universal time

Time synchronization

Setting the Internet time server synchronisation

Display indication

Eco Display Mode

In eco display mode, the display backlight is switched off after a period of inactivity.

 If a message exists, the backlight does not switch off until the message has been scanned by the user.

Display Brightness

Setting the screen brightness (brightness levels 1 - 5)

Automatic menu lock

Specifies whether the menu lock automatically switches to Simple mode after one hour.

Logbook

List of the last changes to the setting values.

Factory settings

All settings can be reset, returning the controller to its delivery state.

 All of the controller's parametrization, statistics, etc. will be lost irrevocably. The controller must then be commissioned once again.

Manual operation

The individual relay outputs, v outputs and the connected consumers can be checked for proper functioning and correct assignment.

 Manual operation should only be used by a specialist for short-term function tests, e.g. during commissioning! How manual operation works: The relays and thus the connected consumers are switched on or off by pressing the output symbol, regardless of the current temperatures and the set parameters. At the same time, the current measurement values of temperature sensors are also shown in the display for the purposes of function control.

Language



The screenshot shows a menu titled "Language" with a back arrow on the left. Below the title, there are three options: "Deutsch" (with a checkmark), "English", and "Italiano". At the bottom right of the menu, there is a black button with a white downward-pointing chevron.

To select the menu language. During initial commissioning and longer power interruptions, the query is made automatically.

WLAN and Internet

WLAN requirements:

- The router must support a sufficient number of simultaneous connections (recommended: at least 16)
- Router without activated MAC filtering
- 2,4 GHz WLAN
- WPA2 / WPA3 encrypted WLAN
- SSID Length between 1 and 32 characters
- WLAN password length max. 64 characters
- No automatic forwarding to a login page when dialling into the WLAN (captive portal)
- No guest network if the communication of several SOREL devices via WiFi is desired, as the mutual visibility of participants must be ensured in the WLAN
- Further functional restrictions must be prevented by suitable network configuration by the network administrator

Problem	Possible cause	Support
	WLAN uses invalid frequency band	<ul style="list-style-type: none"> • Activate the 2.4 GHz frequency band on the router and any integrated repeaters and access points
	Use of a WLAN with communication restrictions (e.g. guest)	<ul style="list-style-type: none"> • Selection of another WLAN without communication restrictions • Relaxation of the communication restrictions on the router
	WLAN SSID (network name) not system-compliant (e.g. too long or with special characters)	<ul style="list-style-type: none"> • Rename the SSID on the router according to the WLAN requirements (siehe Anforderungen oben)
	WLAN password not system-compliant (e.g. too long or with special characters)	<ul style="list-style-type: none"> • Rename the WLAN password on the router according to the WLAN requirements (siehe Anforderungen oben)
	WLAN not WPA2/WPA3-encrypted	<ul style="list-style-type: none"> • Activate WPA2/WPA3 encryption on the router or replace router if not WPA2/WPA3-capable
	Repeater uses a different SSID (network name) than the router	<ul style="list-style-type: none"> • Set the repeater to use the same SSID as the router
	Disabled DHCP prevents the IP address assigned by the router from being received	<ul style="list-style-type: none"> • In the "Settings > Network > WiFi > Enable DHCP" menu, set to "Yes"
		<ul style="list-style-type: none"> • Check the signal strength of the WLAN on the TDC Smart Compact. TDC Smart Compact displays up to 3 bars under "Settings > Network > WiFi > Select network". Alternatively, the signal strength can be measured using suitable apps on the TDC Smart Compact. Improve signal strength by changing the position and orientation of the router or TDC Smart Compact. • Use repeater
	TDC Smart Compact is out of range of the router	<div style="border: 1px solid gray; padding: 5px;"> <p>The signal strength should be better than -70db(m). The higher the db(m) value, the worse the signal. Values between -30db(m) and -40db(m) are good guidelines for a WLAN, while values from -85db(m) are considered critical. Water-bearing objects, metal objects, walls and ceilings contribute particularly strongly to the attenuation of the WiFi signal. Electronic or electrical devices, mirrors and glass surfaces as well as solid pieces of furniture can also have a signal-attenuating effect.</p> </div>



Connection problems between TDC Smart Compact and router (WLAN)



Internet problems despite connection between TDC Smart Compact and router (WLAN)

General disruption to the Internet connection of the WLAN

- Ensure internet connection of the WLAN

Important ports are not activated

- Enable the following ports on the firewall or router: Port 5560 (UDP) and 5568 (TCP) for app access Port 21 and 22 (FTP) for firmware updates

MAC address filtering active

- Deactivate MAC address filtering on the router
- Exclude MAC addresses of smart devices from filtering. The MAC address of TDC Smart Compact is displayed on the WiFi status

WLAN redirects to login page via captive portal

- Use a different WLAN or deactivate forwarding on the router

Your problem still exists? Please contact: support@sorel.de.


Replacing the Fuse



Repairs and maintenance may only be performed by a specialist. Before working on the unit, switch off the power supply and secure it against being switched on again! Check that there is no power flowing!



Only use the enclosed spare fuse (in the housing cover) or an identical fuse with the following specifications: 2AT / 250 V. SOREL Art. no.: 09028

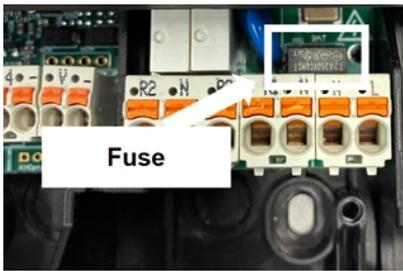

If the mains voltage is switched on and the controller still does not function or display anything, then the internal device fuse may be defective. First find the external fault source (e.g. pump), replace it and then check the device fuse.

To change the device fuse, open the device as described under see 'Wall Installation' on page 9, remove the old fuse, check it and, if necessary, replace it with a spare fuse (in the housing cover).

Only then put the controller back into operation and check the function of the switching outputs in manual mode.

Maintenance



As part of the general annual maintenance of your system, you should also have the functions of the controller checked by a specialist and the settings optimised if necessary.

Performing maintenance:

- Assessment/plausibility check of the analyses (see 'Statistic' on page 23)
- Checking the messages that have occurred (see 'Message Log' on page 40)
- Verification/plausibility check of the current measured values (see 'System Status' on page 22)
- Checking the switching outputs/consumers in manual mode (see 'Manual operation' on page 37)
- Possible optimization of the parameters setting (**only on customers request**)

Message Log


Message	Note for the specialist
Sensor x defective	Means that either the sensor, sensor entrance on the controller or the connecting wire was defective (see 'Temperature Resistance Table for Pt1000 Sensors' on page 10).
Collector alarm	Means that the temperature on the collector set under "Collector protection" was exceeded.
Restart	Means that the controller was restarted, for example, due to a power outage. Check date & time!
No flow	If ΔT between store and collector is 50 ° C or more for 5 minutes, this message is displayed.
Frequent on / off	A relay was switched on and off more than 5 times within 5 minutes.
Collector protection	The collector temperature has exceeded the set temperature and the solar pump has been turned on, in order to cool the collector via the storage.
Recooling	The exceeding energy is/was transmitted via the collector to protect the system.
Frost Protection	The solar pump is switched on in order to protect the collector from freezing.

Previous messages can be called up in the "System status > Messages" menu.

SOREL Connect App

The SOREL Connect app enables visualisation of the system status and remote access to the controller menu.

How to set it up:

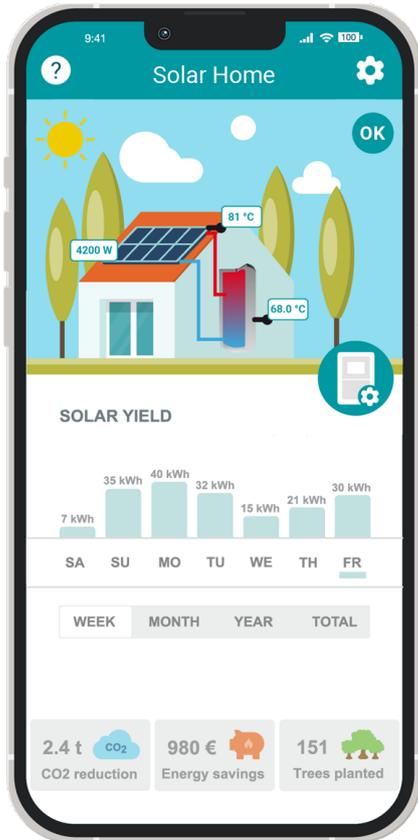

1. Download the SOREL Connect app for iOS or Android onto your mobile device.
2. Create account
3. Click on the activation link in your e-mail inbox
4. Connect the controller to the WLAN: "Settings > Network > WiFi > Select network".
5. Enter the selected e-mail address in the access list in the controller: 'Settings > Network > WiFi > Manage access'
If this menu item is not displayed, the menu visibility rules must first be expanded under Settings > Menu view, see 'Menu visibility' on page 24.
6. Log in to app with e-mail and password
7. Check the device address under "System status > WiFi status" and enter it in the SOREL Connect app. Devices in the same WLAN are automatically detected.

Final Declaration

Although these instructions have been created with the greatest possible care, the possibility of incorrect or incomplete information cannot be excluded. Subject as a basic principle to errors and technical changes.

Date and time of installation:

Name of installation company:

Space for notes:

Your specialised dealer:

Manufacturer:

SOREL GmbH Mikroelektronik
Reme-Str. 12
D - 58300 Wetter (Ruhr)

+49 (0)2335 682 77 0
info@sorel.de
www.sorel.de

Stand: 23.09.2025 | V1.25
SOREL